

# LG290P (03) GNSS Protocol Specification

**GNSS Module Series**

Version: 1.0

Date: 2024-09-02

Status: Released



At Quectel, our aim is to provide timely and comprehensive services to our customers. If you require any assistance, please contact our headquarters:

**Quectel Wireless Solutions Co., Ltd.**

Building 5, Shanghai Business Park Phase III (Area B), No.1016 Tianlin Road, Minhang District, Shanghai 200233, China

Tel: +86 21 5108 6236

Email: [info@quectel.com](mailto:info@quectel.com)

**Or our local offices. For more information, please visit:**

<http://www.quectel.com/support/sales.htm>.

**For technical support, or to report documentation errors, please visit:**

<http://www.quectel.com/support/technical.htm>.

Or email us at: [support@quectel.com](mailto:support@quectel.com).

## Legal Notices

We offer information as a service to you. The provided information is based on your requirements and we make every effort to ensure its quality. You agree that you are responsible for using independent analysis and evaluation in designing intended products, and we provide reference designs for illustrative purposes only. Before using any hardware, software or service guided by this document, please read this notice carefully. Even though we employ commercially reasonable efforts to provide the best possible experience, you hereby acknowledge and agree that this document and related services hereunder are provided to you on an “as available” basis. We may revise or restate this document from time to time at our sole discretion without any prior notice to you.

## Use and Disclosure Restrictions

### License Agreements

Documents and information provided by us shall be kept confidential, unless specific permission is granted. They shall not be accessed or used for any purpose except as expressly provided herein.

### Copyright

Our and third-party products hereunder may contain copyrighted material. Such copyrighted material shall not be copied, reproduced, distributed, merged, published, translated, or modified without prior written consent. We and the third party have exclusive rights over copyrighted material. No license shall be granted or conveyed under any patents, copyrights, trademarks, or service mark rights. To avoid ambiguities, purchasing in any form cannot be deemed as granting a license other than the normal non-exclusive, royalty-free license to use the material. We reserve the right to take legal action for noncompliance with abovementioned requirements, unauthorized use, or other illegal or malicious use of the material.

## Trademarks

Except as otherwise set forth herein, nothing in this document shall be construed as conferring any rights to use any trademark, trade name or name, abbreviation, or counterfeit product thereof owned by Quectel or any third party in advertising, publicity, or other aspects.

## Third-Party Rights

This document may refer to hardware, software and/or documentation owned by one or more third parties (“third-party materials”). Use of such third-party materials shall be governed by all restrictions and obligations applicable thereto.

We make no warranty or representation, either express or implied, regarding the third-party materials, including but not limited to any implied or statutory, warranties of merchantability or fitness for a particular purpose, quiet enjoyment, system integration, information accuracy, and non-infringement of any third-party intellectual property rights with regard to the licensed technology or use thereof. Nothing herein constitutes a representation or warranty by us to either develop, enhance, modify, distribute, market, sell, offer for sale, or otherwise maintain production of any our products or any other hardware, software, device, tool, information, or product. We moreover disclaim any and all warranties arising from the course of dealing or usage of trade.

## Privacy Policy

To implement module functionality, certain device data are uploaded to Quectel’s or third-party’s servers, including carriers, chipset suppliers or customer-designated servers. Quectel, strictly abiding by the relevant laws and regulations, shall retain, use, disclose or otherwise process relevant data for the purpose of performing the service only or as permitted by applicable laws. Before data interaction with third parties, please be informed of their privacy and data security policy.

## Disclaimer

- a) We acknowledge no liability for any injury or damage arising from the reliance upon the information.
- b) We shall bear no liability resulting from any inaccuracies or omissions, or from the use of the information contained herein.
- c) While we have made every effort to ensure that the functions and features under development are free from errors, it is possible that they could contain errors, inaccuracies, and omissions. Unless otherwise provided by valid agreement, we make no warranties of any kind, either implied or express, and exclude all liability for any loss or damage suffered in connection with the use of features and functions under development, to the maximum extent permitted by law, regardless of whether such loss or damage may have been foreseeable.
- d) We are not responsible for the accessibility, safety, accuracy, availability, legality, or completeness of information, advertising, commercial offers, products, services, and materials on third-party websites and third-party resources.

**Copyright © Quectel Wireless Solutions Co., Ltd. 2024. All rights reserved.**

# About the Document

## Document Information

<b>Title</b>	<b>LG290P (03) GNSS Protocol Specification</b>
--------------	--

<b>Subtitle</b>	GNSS Module Series
-----------------	--------------------

<b>Document Type</b>	GNSS Protocol Specification
----------------------	-----------------------------

<b>Document Status</b>	Released
------------------------	----------

## Revision History

Version	Date	Description
-	2023-12-18	Creation of the document
1.0	2024-09-02	First official release

## Contents

About the Document.....	3
Contents.....	4
Table Index.....	6
Figure Index.....	7
<b>1 Introduction .....</b>	<b>8</b>
<b>2 NMEA Protocol.....</b>	<b>9</b>
2.1. Structure of NMEA Protocol Messages .....	9
2.2. Standard Messages .....	11
2.2.1. RMC .....	11
2.2.2. GGA.....	13
2.2.3. GSV.....	16
2.2.4. GSA.....	17
2.2.5. VTG.....	19
2.2.6. GLL.....	20
2.3. PQTM Messages .....	22
2.3.1. PQTMVER.....	22
2.3.2. PQTMCOLD .....	23
2.3.3. PQTMWARM.....	24
2.3.4. PQTMHOT .....	24
2.3.5. PQTMSRR .....	24
2.3.6. PQTMUNIQID .....	25
2.3.7. PQTMSAVEPAR .....	26
2.3.8. PQTMRESTOREPAR .....	26
2.3.9. PQTMVERNO .....	27
2.3.10. PQTMCFGUART.....	28
2.3.11. PQTMCFGPPS .....	30
2.3.12. PQTMCFGPROT .....	32
2.3.13. PQTMCFGNMEADP.....	33
2.3.14. PQTMEPE.....	35
2.3.15. PQTMCFGMSGRATE.....	35
2.3.16. PQTMVEL .....	40
2.3.17. PQTMCFGGEOFENCE.....	41
2.3.18. PQTMGEOFENCESTATUS.....	43
2.3.19. PQTMGNSSSTART .....	44
2.3.20. PQTMGNSSSTOP.....	45
2.3.21. PQTMTXT .....	45
2.3.22. PQTMCFGSVIN.....	46
2.3.23. PQTMSVINSTATUS.....	48
2.3.24. PQTMPVT .....	49
2.3.25. PQTMCFGRCVRMODE .....	51

2.3.26.	PQTMDEBUGON.....	52
2.3.27.	PQTMDEBUGOFF.....	53
2.3.28.	PQTMCFGFIXRATE.....	53
2.3.29.	PQTMCFGRTK.....	55
2.3.30.	PQTMCFGCNST.....	56
2.3.31.	PQTM DOP.....	57
2.3.32.	PQTMPL.....	58
2.3.33.	PQTMCFGODO.....	59
2.3.34.	PQTMRESETO DO.....	61
2.3.35.	PQTMODO.....	61
2.3.36.	PQTMCFG SIGNAL.....	62
2.3.37.	PQTMCFG SAT.....	65
2.3.38.	PQTMCFG RSID.....	69
2.3.39.	PQTMCFG RTCM.....	70
<b>3</b>	<b>RTCM Protocol.....</b>	<b>72</b>
<b>4</b>	<b>Appendix A References.....</b>	<b>74</b>
<b>5</b>	<b>Appendix B GNSS (NMEA) Numbering.....</b>	<b>76</b>
<b>6</b>	<b>Appendix C Special Characters.....</b>	<b>77</b>

## Table Index

Table 1: Supported Protocol.....	8
Table 2: Structure of NMEA Protocol Messages.....	9
Table 3: NMEA Talker ID .....	10
Table 4: Error Codes .....	22
Table 5: Supported Messages.....	38
Table 6: Supported RTCM3 Messages .....	72
Table 7: Terms and Abbreviations .....	74
Table 8: GNSS Satellites (NMEA) Numbering .....	76
Table 9: Special Characters .....	77

## Figure Index

Figure 1: Structure of NMEA Protocol Messages .....	9
Figure 2: RTCM MSM Time Offset.....	37



# 1 Introduction

Quectel LG290P (03) GNSS module supports GPS, GLONASS, Galileo, BDS, QZSS and NavIC (IRNSS) constellations (Default constellations: GPS + GLONASS + Galileo + BDS + QZSS + NavIC). Concurrent tracking of GPS L1 C/A, GPS L1C <sup>1)</sup>, GPS L2C, GPS L5-Q, GLONASS G1 C/A, GLONASS G2 C/A, Galileo E1, Galileo E5a, Galileo E5b, Galileo E6, BDS B1I, BDS B1C, BDS B2a, BDS B2b, BDS B2I, BDS B3I, QZSS L1 C/A, QZSS L1C <sup>1)</sup>, QZSS L2C, QZSS L5-Q, NavIC L5 frequency bands provides fast and accurate acquisition and makes this module an ideal solution for positioning and navigation in various vertical markets.

This document describes the software commands that are needed to control and modify the module configuration. The software commands are NMEA proprietary commands defined by Quectel (PQTM commands). To report GNSS information, the module supports message outputting in NMEA 0183 protocol and RTCM protocol format.

The LG290P (03) module supports the following protocols:

**Table 1: Supported Protocol**

Protocol	Type
NMEA 0183 V4.11	Output, ASCII, standard
	Input/output, ASCII, proprietary
RTCM 10403.3	Input/output, binary

**NOTE**

- <sup>1)</sup> The LG290P (03) module supports GPS L1C and QZSS L1C frequency band which is still under development. Contact Quectel Technical Support ([support@quectel.com](mailto:support@quectel.com)) for details.
- Quectel assumes no responsibility if commands other than the ones listed herein are used.

# 2 NMEA Protocol

## 2.1. Structure of NMEA Protocol Messages

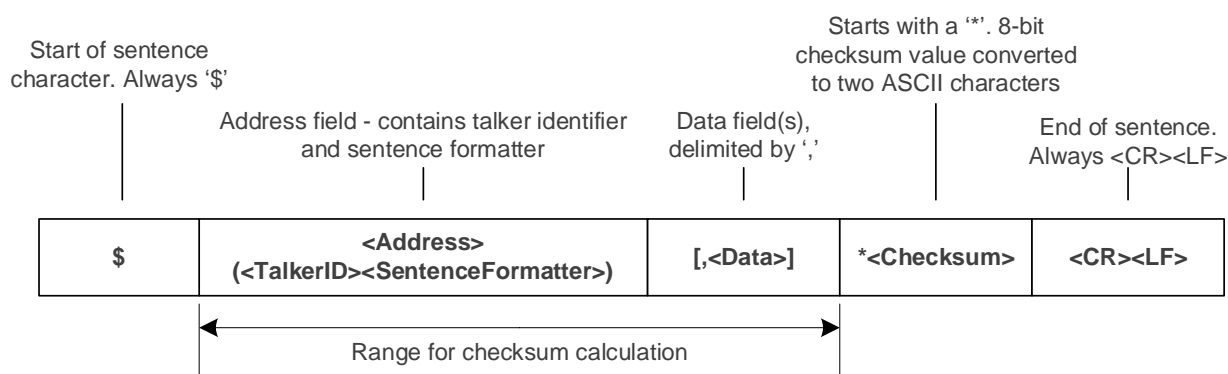


Figure 1: Structure of NMEA Protocol Messages

Table 2: Structure of NMEA Protocol Messages

Field	Description
\$	Start of the sentence (Hex 0x24).
<Address>	<p><b>In Standard Messages:</b>                      In standard messages, this field consists of a two-character talker identifier (TalkerID) and a three-character sentence formatter (SentenceFormatter). The talker identifier identifies the type of talker. For more information on the TalkerID, see <a href="#">Table 3: NMEA Talker ID</a>.</p> <p>The sentence formatter identifies the data type and the string format of the successive fields.</p> <p><b>In Proprietary Messages:</b>                      In proprietary messages, this field consists of the proprietary character <b>P</b> followed by a three-character Manufacturer's Mnemonic Code, used to identify the TALKER issuing a</p>

Field	Description
	proprietary sentence, and any additional characters as required.
<Data>	Data fields, delimited by the data field delimiter ‘,’. Variable length (depending on the NMEA message type).
<Checksum>	Checksum field follows the checksum delimiter character *. Checksum is the 8-bit exclusive OR of all characters in the sentence, including ‘,’ the field delimiter, between but not including the \$ and the * delimiters.
<CR><LF>	End of sentence (Hex 0x0D 0x0A).

**Table 3: NMEA Talker ID**

GNSS Constellation Configuration	TalkerID (NMEA 0183 V4.11)
GPS	GP
GLONASS	GL
Galileo	GA
BDS	GB
QZSS	GQ
NavIC (IRNSS)	GI
Combination of Multiple Satellite Systems	GN

**NMEA Checksum Sample Code:**

```
// pData is the data array whose checksum needs to be calculated:
unsigned char Ql_Check_XOR(const unsigned char *pData, unsigned int Length)
{
    unsigned char result = 0;
    unsigned int i = 0;

    if((NULL == pData) || (Length < 1))
    {
        return 0;
    }
    for(i = 0; i < Length; i++)
    {
        result ^= *(pData + i);
    }
}
```

```

}

return result;
}

```

## 2.2. Standard Messages

This chapter explains the standard NMEA 0183 V4.11 messages supported by the module.

### 2.2.1. RMC

Recommended Minimum Specific GNSS Data. Time, date, position, course, and speed data provided by a GNSS receiver.

**Type:**

Output

**Synopsis:**

```

$<TalkerID>RMC,<UTC>,<Status>,<Lat>,<N/S>,<Lon>,<E/W>,<SOG>,<COG>,<Date>,<MagVar>,<MagVarDir>,<ModeInd>,<NavStatus>*<Checksum><CR><LF>

```

**Parameter:**

Field	Format	Unit	Example	Description
\$	Character	-	\$	Each NMEA message starts with \$.
<TalkerID>	String, 2 characters	-	GN	Talker identifier. See <a href="#">Table 3: NMEA Talker ID.</a>
RMC	String, 3 characters	-	RMC	Recommended Minimum Specific GNSS Data.
<UTC>	hhmmss.sss	-	025159.00 0	Position fix UTC. hh: Hours (00–23) mm: Minutes (00–59) ss: Seconds (00–59) sss: Decimal fraction of seconds
<Status>	Character	-	A	Positioning system status. A = Data valid. V = Navigation receiver warning.
<Lat>	ddmm.mmmmmmm m	-	3149.2999 3210	Latitude. dd: Degrees (00–90)

Field	Format	Unit	Example	Description
				mm: Minutes (00–59) mmmmmmmm: Decimal fraction of minutes Note that this field is empty in case of an invalid value.
<N/S>	Character	-	N	North-south direction. N = North S = South Note that this field is empty in case of an invalid value.
<Lon>	dddmm.mmmmmmm mm	-	11706.912 64104	Longitude. ddd: Degrees (000–180) mm: Minutes (00–59) mmmmmmmm: Decimal fraction of minutes Note that this field is empty in case of an invalid value.
<E/W>	Character	-	E	East-west direction. E = East W = West Note that this field is empty in case of an invalid value.
<SOG>	Numeric	Knot	0.001	Speed over ground. Variable length. Note that this field is empty in case of an invalid value.
<COG>	Numeric	Degree	043.43	Course over ground. Variable length. Maximum value: 359.9. Note that this field is empty in case of an invalid value.
<Date>	ddmmyy	-	291123	Date. dd: Day of month mm: Month yy: Year
<MagVar>	-	-	-	Magnetic variation. Not supported.
<MagVarDir>	-	-	-	Direction of magnetic variation. Not supported.
<ModeInd>	Character	-	A	Mode indicator. A = Autonomous mode. Satellite system used in non-differential mode in position fix. D = Differential mode. Satellite system

Field	Format	Unit	Example	Description
				used in differential mode in position fix. Corrections from ground stations or Satellite Based Augmentation System (SBAS). E = Estimated (dead reckoning) mode. F = Float RTK. Satellite system used in RTK mode with floating integers. N = No fix. Satellite system not used in position fix, or fix not valid. R = Real Time Kinematic (RTK). Satellite system used in RTK mode with fixed integers.
<NavStatus>	Character	-	V	Navigational status. Not supported. Always "V" (Navigational status not valid).
<Checksum>	Hexadecimal	-	33	Checksum.
<CR><LF>	Character	-	-	Carriage return and line feed.

**Example:**

```
$GNRMC,025159.000,A,3149.29993210,N,11706.91264104,E,0.001,043.43,291123,,A,V*33
```

**2.2.2. GGA**

Global Positioning System Fix Data. Time, position, and fix-related data for a GNSS receiver.

**Type:**

Output

**Synopsis:**

```
$<TalkerID>GGA,<UTC>,<Lat>,<N/S>,<Lon>,<E/W>,<Quality>,<NumSatUsed>,<HDOP>,<Alt>,M,<Sep>,<M>,<DiffAge>,<DiffStation>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Example	Description
\$	Character	-	\$	Each NMEA message starts with \$.
<TalkerID>	String, 2 characters	-	GN	Talker identifier. See <a href="#">Table 3: NMEA Talker ID.</a>

Field	Format	Unit	Example	Description
GGA	String, 3 characters	-	GGA	Global Positioning System Fix Data.
<UTC>	hhmmss.sss	-	025159.00 0	Position fix UTC. hh: Hours (00–23) mm: Minutes (00–59) ss: Seconds (00–59) sss: Decimal fraction of seconds
<Lat>	ddmm.mmmmmmm m	-	3149.2999 3210	Latitude. dd: Degrees (00–90) mm: Minutes (00–59) mmmmmmmm: Decimal fraction of minutes Note that this field is empty in case of an invalid value.
<N/S>	Character	-	N	North-south direction. N = North S = South Note that this field is empty in case of an invalid value.
<Lon>	dddmm.mmmmmmm mm	-	11706.912 64104	Longitude. ddd: Degrees (000–180) mm: Minutes (00–59) mmmmmmmm: Decimal fraction of minutes Note that this field is empty in case of an invalid value.
<E/W>	Character	-	E	East-west direction. E = East W = West Note that this field is empty in case of an invalid value.
<Quality>	Numeric, 1 digit	-	1	GPS quality indicator. 0 = Fix not available or invalid. 1 = GPS SPS Mode, fix valid. 2 = Differential GPS, SPS Mode, or Satellite Based Augmentation System (SBAS), fix valid. 3 = GPS PPS Mode, fix valid. 4 = Real Time Kinematic (RTK) System used in RTK mode with fixed integers. 5 = Float RTK. Satellite system used

Field	Format	Unit	Example	Description
				in RTK mode, floating integers.
<NumSatUsed> <sup>1)</sup>	Numeric, 2 digits	-	16	Number of satellites in use.
<HDOP>	Numeric	-	1.26	Horizontal dilution of precision.
<Alt>	Numeric	Meter	97.250	Altitude above mean-sea-level (geoid).
M	Character	-	M	Unit of <Alt>. "M" = Meter.
<Sep>	Numeric	Meter	-4.945	Geoid separation (the difference between the earth ellipsoid surface and the mean-sea-level (geoid) surface defined by the reference datum used in the position solution).
M	Character	-	M	Unit of <Sep>. "M" = Meter.
<DiffAge>	-	Second	-	Differential GPS data age. Note that this field is empty in case of an invalid value.
<DiffStation>	-	-	-	Differential reference station ID. Range: 0000–4095. Note that this field is empty in case of an invalid value.
<Checksum>	Hexadecimal	-	5A	Checksum.
<CR><LF>	Character	-	-	Carriage return and line feed.

**Example:**

```
$GNGGA,025159.000,3149.29993210,N,11706.91264104,E,1,16,1.26,97.250,M,-4.945,M,,*5A
```

**NOTE**

1. The NMEA 0183 specification indicates that the **GGA** messages are GPS specific. However, when the receiver is configured for multi-constellations, the content of a **GGA** message will be generated from the multi-constellation solution.
2. <sup>1)</sup> According to the NMEA 0183 specification, the number of satellites in use is between 00 and 12. However, in the multi-constellation solution, the number of satellites in use may exceed 12.



**2.2.3. GSV**

GNSS Satellites in View. The GSV sentence provides the number of satellites in view (SV), satellite ID numbers, elevation, azimuth, and SNR value, and contains maximum four satellites per transmission. Therefore, it may take several sentences to get complete information. The total number of sentences being transmitted and the sentence number are indicated in the first two data fields.

**Type:**

Output

**Synopsis:**

```
$<TalkerID>GSV,<TotalNumSen>,<SenNum>,<TotalNumSat>{,<SatID>,<SatElev>,<SatAz>,<SatCN0>},<SignalID>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Example	Description
\$	Character	-	\$	Each NMEA message starts with \$.
<TalkerID>	String, 2 characters	-	GP	Talker identifier. See <a href="#">Table 3: NMEA Talker ID</a> .
GSV	String, 3 characters	-	GSV	GNSS Satellites in View.
<TotalNumSen>	Numeric	-	2	Total number of sentences. Range: 1–9.
<SenNum>	Numeric	-	1	Sentence number. Range: 1–<TotalNumSen>.
<TotalNumSat>	Numeric	-	05	Total number of satellites in view.
Start of repeat block. Repeat times: 1–4.				
<SatID>	Numeric	-	10	Satellite ID. See <a href="#">Table 8: GNSS Satellites (NMEA) Numbering</a> .
<SatElev>	Numeric	Degree	77	Satellite elevation. Range: 00–90. Note that this field is empty in case of an invalid value.
<SatAz>	Numeric	Degree	300	Satellite azimuth, with true north as the reference plane. Range: 000–360. Note that this field is empty in case of an invalid value.
<SatCN0>	Numeric	dB-Hz	36	Satellite C/N <sub>0</sub> . Range: 00–99.

Field	Format	Unit	Example	Description
				Null when not tracking.
End of repeat block.				
<SignalID>	Numeric	-	1	GNSS signal ID. See <a href="#">Table 8: GNSS Satellites (NMEA) Numbering</a> .
<Checksum>	Hexadecimal	-	67	Checksum.
<CR><LF>	Character	-	-	Carriage return and line feed.

**Example:**

```
$GPGSV,2,1,05,10,77,300,36,12,40,082,31,23,58,153,35,25,46,137,33,1*67
$GPGSV,2,2,05,32,45,316,34,1*52
$GPGSV,2,1,05,10,77,300,31,12,40,082,25,23,58,153,29,25,46,137,28,6*65
$GPGSV,2,2,05,32,45,316,25,6*55
$GPGSV,1,1,04,10,77,300,32,23,58,153,30,25,46,137,30,32,45,316,26,8*61
$GLGSV,1,1,03,67,57,036,37,68,30,328,34,78,53,184,27,1*4B
$GLGSV,1,1,03,67,57,036,31,68,30,328,27,78,53,184,31,3*4A
```

**NOTE**

GN cannot be used for GSV sentences. If satellites of multiple constellations are in view, GSV sentences are output with the corresponding talker ID for each constellation, respectively.

**2.2.4. GSA**

GNSS DOP and Active Satellites. GNSS receiver operating mode, satellites used in the navigation solution reported by the GGA sentence, and DOP values.

**Type:**

Output

**Synopsis:**

```
$<TalkerID>GSA,<Mode>,<FixMode>{,<SatID>},<PDOP>,<HDOP>,<VDOP>,<SystemID>*<Checksum>
<CR><LF>
```

**Parameter:**

Field	Format	Unit	Example	Description
\$	Character	-	\$	Each NMEA message starts with \$.
<TalkerID>	String, 2 characters	-	GN	Talker identifier. See <a href="#">Table 3: NMEA Talker ID</a> .
GSA	String, 3 characters	-	GSA	GNSS DOP and Active Satellites.
<Mode>	Character	-	A	Selection of 2D or 3D fix. M = Manual, forced to operate in 2D or 3D mode. A = Automatic, allowed to automatically switch to 2D or 3D mode.
<FixMode>	Numeric	-	3	Fix mode. 1 = Fix not available 2 = 2D 3 = 3D
Start of repeat block. Repeat times: 12.				
<SatID>	Numeric	-	10	ID numbers of satellites used in solution. See <a href="#">Table 8: GNSS Satellites (NMEA) Numbering</a> .
End of repeat block.				
<PDOP>	Numeric	-	2.38	Position dilution of precision. Maximum value: 99.99.
<HDOP>	Numeric	-	1.26	Horizontal dilution of precision. Maximum value: 99.99.
<VDOP>	Numeric	-	2.01	Vertical dilution of precision. Maximum value: 99.99.
<SystemID>	Numeric	-	1	GNSS system ID. See <a href="#">Table 8: GNSS Satellites (NMEA) Numbering</a> .
<Checksum>	Hexadecimal	-	0B	Checksum.
<CR><LF>	Character	-	-	Carriage return and line feed.

**Example:**

```
$GNGSA,A,3,10,12,23,25,32,,,,,,,,,2.38,1.26,2.01,1*0B
$GNGSA,A,3,67,68,78,,,,,,,,,2.38,1.26,2.01,2*0D
$GNGSA,A,3,21,,,,,,,,,2.38,1.26,2.01,3*0F
$GNGSA,A,3,06,13,16,32,37,41,,,,,,,,,2.38,1.26,2.01,4*08
$GNGSA,A,3,,,,,,,,,2.38,1.26,2.01,5*0A
$GNGSA,A,3,03,,,,,,,,,2.38,1.26,2.01,6*0A
```

**NOTE**

If less than 12 satellites are used for navigation, the remaining <SatID> fields are left empty. If more than 12 satellites are used for navigation, only the IDs of the first 12 satellites are output.

**2.2.5. VTG**

Course Over Ground & Ground Speed. The actual course and speed relative to the ground.

**Type:**

Output

**Synopsis:**

\$<TalkerID>VTG,<COGT>,T,<COGM>,M,<SOGN>,N,<SOGK>,K,<ModeInd>\*<Checksum><CR><LF>

**Parameter:**

Field	Format	Unit	Example	Description
\$	Character	-	\$	Each NMEA message starts with \$.
<TalkerID>	String, 2 characters	-	GN	Talker identifier. See <a href="#">Table 3: NMEA Talker ID</a> .
VTG	String, 3 characters	-	VTG	Course Over Ground & Ground Speed.
<COGT>	Numeric	Degrees	043.43	Course over ground, in true north direction.
T	Character	-	T	Fixed field: true.
<COGM>	Numeric	Degrees	-	Course over ground (magnetic). Not supported.
M	Character	-	M	Fixed field: magnetic.
<SOGN>	Numeric	Knots	0.001	Speed over ground in knots.
N	Character	-	N	Fixed field: knot.
<SOGK>	Numeric	km/h	0.001	Speed over ground in kilometers per hour.
K	Character	-	K	Fixed field: kilometers per hour
<ModeInd>	Character	-	A	Mode indicator. A = Autonomous mode. Satellite system used in non-differential mode in position fix

Field	Format	Unit	Example	Description
				D = Differential mode. Satellite system used in differential mode in position fix. Corrections from ground stations or Satellite Based Augmentation System (SBAS) E = Estimated (dead reckoning) mode N = No fix. Satellite system is not used for positioning, or positioning is invalid
<Checksum>	Hexadecimal	-	23	Checksum.
<CR><LF>	Character	-	-	Carriage return and line feed.

**Example:**

**\$GNVTG,043.43,T,,M,0.001,N,0.001,K,A\*23**

**2.2.6. GLL**

Geographic Position – Latitude/Longitude. Latitude and longitude of the GNSS receiver position, the time of position fix and status.

**Type:**

Output

**Synopsis:**

**\$<TalkerID>GLL,<Lat>,<N/S>,<Lon>,<E/W>,<UTC>,<Status>,<ModeInd>\*<Checksum><CR><LF>**

**Parameter:**

Field	Format	Unit	Example	Description
\$	Character	-	\$	Each NMEA message starts with \$.
<TalkerID>	String, characters	2	GN	Talker identifier. See <a href="#">Table 3: NMEA Talker ID.</a>
GLL	String, characters	3	GLL	Geographic Position – Latitude/Longitude.
<Lat>	ddmm.mmmm mmmm	-	3149.29993210	Latitude. dd: Degrees (00–90) mm: Minutes (00–59) mmmmmmmm: Decimal fraction of minutes

Field	Format	Unit	Example	Description
				Note that this field is empty in case of an invalid value.
<N/S>	Character	-	N	North-south direction. N = North S = South Note that this field is empty in case of an invalid value.
<Lon>	dddmm.mmm mmmm	-	11706.91264104	Longitude. ddd: Degrees (000–180) mm: Minutes (00–59) mmmmmmmm: Decimal fraction of minutes Note that this field is empty in case of an invalid value.
<E/W>	Character	-	E	East-west direction. E = East W = West Note that this field is empty in case of an invalid value.
<UTC>	hhmmss.sss	-	025159.000	Position fix UTC. hh: Hours (00–23) mm: Minutes (00–59) ss: Seconds (00–59) sss: Decimal fraction of seconds
<Status>	Character	-	A	Positioning system status. A = Data valid. V = Data not valid.
<ModeInd>	Character	-	A	Mode indicator. A = Autonomous mode. Satellite system used in non-differential mode in position fix. D = Differential mode. Satellite system used in differential mode in position fix. Corrections from ground stations or Satellite Based Augmentation System (SBAS). E = Estimated (dead reckoning) mode. N = Data not valid.
<Checksum>	Hexadecimal	-	45	Checksum.
<CR><LF>	Character	-	-	Carriage return and line feed.

Example:

```
$GNGLL,3149.29993210,N,11706.91264104,E,025159.000,A,A*45
```

## 2.3. PQTM Messages

This chapter explains the PQTM messages (proprietary NMEA messages defined by Quectel) supported by LG290P (03) module.

**Table 4: Error Codes**

Field	Format	Unit	Description
<ErrCode>	Numeric	-	Error code. 1 = Invalid parameters 2 = Failed execution 3 = Unsupported command

**NOTE**

To avoid uncertainties, you need to send **\$PQTMSAVEPAR\*5A** to save the configuration after setting parameters through the Set type command, and then restart the module to ensure that all configurations take effect. Otherwise, the module will restore default values after powering on.

### 2.3.1. PQTMVER

Outputs the firmware version.

**Type:**

Output

**Synopsis:**

```
$PQTMVER,<MsgVer>,<VerName>,<VerStr>,<BuildDate>,<BuildTime>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.

Field	Format	Unit	Description
<VerName>	String	-	Version name. Fixed at "MODULE".
<VerStr>	String	-	Main version string.
<BuildDate>	yyyy/mm/dd	-	Firmware build date. yyyy: Year mm: Month dd: Day of month
<BuildTime>	hh:mm:ss	-	Firmware build time. hh: Hours mm: Minutes ss: Seconds

**Example:**

```
$PQTMVER,1,MODULE,LG290P03AANR01A03S,2024/04/30,10:53:07*32
```

**NOTE**

Upon each successful startup, the module will output this message first.

### 2.3.2. PQTMCOLD

Performs a cold start.

**Type:**

Command

**Synopsis:**

```
$PQTMCOLD*<Checksum><CR><LF>
```

**Parameter:**

None

**Example:**

```
$PQTMCOLD*1C
```



### 2.3.3. PQTMWARM

Performs a warm start.

**Type:**

Command

**Synopsis:**

```
$PQTMWARM*<Checksum><CR><LF>
```

**Parameter:**

None

**Example:**

```
$PQTMWARM*11
```

### 2.3.4. PQTMHOT

Performs a hot start.

**Type:**

Command

**Synopsis:**

```
$PQTMHOT*<Checksum><CR><LF>
```

**Parameter:**

None

**Example:**

```
$PQTMHOT*4B
```

### 2.3.5. PQTMSRR

Performs a system reset and reboots the receiver.

**Type:**

Command

**Synopsis:**

```
$PQTMSSRR*<Checksum><CR><LF>
```

**Parameter:**

None

**Example:**

```
$PQTMSSRR*4B
```

### 2.3.6. PQTMUNIQID

Queries the module unique ID.

**Type:**

Command

**Synopsis:**

```
$PQTMUNIQID*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMUNIQID,OK,<Length>,<ID>*<Checksum><CR><LF>
```

**Parameter included in the result:**

Field	Format	Unit	Description
<Length>	Numeric	Byte	Length of module unique ID.
<ID>	Hexadecimal	-	Module unique ID.

- If failed, the module returns:

```
$PQTMUNIQID,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

Example:

```
$PQTMUNIQID*16
$PQTMUNIQID,OK,16,81D62010EE0AF375BDF5952CDC3757A1*3E
```

### 2.3.7. PQTMSAVEPAR

Saves the configurations into NVM.

**Type:**

Command

**Synopsis:**

```
$PQTMSAVEPAR*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMSAVEPAR,OK*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMSAVEPAR,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

Example:

```
$PQTMSAVEPAR*5A
$PQTMSAVEPAR,OK*72
```

### 2.3.8. PQTMRSTOREPAR

Restores the parameters configured by all commands to their default values. This command takes effect after restarting.

**Type:**

Command

**Synopsis:**

```
$PQTMRESTOREPAR*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMRESTOREPAR,OK*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMRESTOREPAR,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

**Example:**

```
$PQTMRESTOREPAR*13
$PQTMRESTOREPAR,OK*3B
```

### 2.3.9. PQTMVERNO

Queries the firmware version.

**Type:**

Command

**Synopsis:**

```
$PQTMVERNO*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMVERNO,<VerStr>,<BuildDate>,<BuildTime>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<VerStr>	String	-	Firmware version.
<BuildDate>	yyyy/mm/dd	-	Firmware build date. yyyy: Year mm: Month dd: Day of month
<BuildTime>	hh:mm:ss	-	Firmware build time. hh: Hours mm: Minutes ss: Seconds

- If failed, the module returns:

```
$PQTMVERNO,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
$PQTMVERNO*58
$PQTMVERNO,LG290P03AANR01A03S,2024/04/30,10:53:07*18
```

### 2.3.10. PQTMCFGUART

Sets/gets the UART interface.

**Type:**

Set/Get

**Synopsis:**

```
//Set the current UART interface:
$PQTMCFGUART,W,<BaudRate>[,<DataBit>,<Parity>,<StopBit>,<FlowCtrl>]*<Checksum><CR><LF>
//Set the specified UART interface:
$PQTMCFGUART,W,<Index>,<BaudRate>[,<DataBit>,<Parity>,<StopBit>,<FlowCtrl>]*<Checksum><CR><LF>
//Get the configuration on the current UART interface or a specified UART interface:
$PQTMCFGUART,R[,<Index>]*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<Index>	Numeric	-	UART interface index. 1 = UART1 2 = UART2 3 = UART3
<BaudRate>	Numeric	bps	UART baud rate. 9600 115200 230400 <u>460800</u> 921600
<DataBit>	Numeric	bit	UART data bit. <u>8</u> = 8 bits
<Parity>	Numeric	-	Parity. <u>0</u> = No parity 1 = Odd parity 2 = Even parity 3 = Mark 4 = Space
<StopBit>	Numeric	-	Stop bit(s). <u>1</u> = 1 stop bit 2 = 2 stop bits
<FlowCtrl>	Numeric	-	Flow control. <u>0</u> = None

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGUART,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGUART,OK,<Index>,<BaudRate>,<DataBit>,<Parity>,<StopBit>,<FlowCtrl>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGUART,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

//Configure the baud rate on the current UART interface:

**\$PQTMCFGUART,W,115200\*18**

**\$PQTMCFGUART,OK\*60**

//Configure the baud rate on UART1:

**\$PQTMCFGUART,W,1,115200\*05**

**\$PQTMCFGUART,OK\*60**

//Configure all parameters on the current UART interface:

**\$PQTMCFGUART,W,115200,8,0,1,0\*11**

**\$PQTMCFGUART,OK\*60**

//Configure all parameters on UART1:

**\$PQTMCFGUART,W,1,115200,8,0,1,0\*0C**

**\$PQTMCFGUART,OK\*60**

//Get the configuration on the current UART interface:

**\$PQTMCFGUART,R\*36**

**\$PQTMCFGUART,OK,1,115200,8,0,1,0\*5F**

//Get the configuration on UART1.

**\$PQTMCFGUART,R,1\*2B**

**\$PQTMCFGUART,OK,1,115200,8,0,1,0\*5F**

**NOTE**

If the default value is not given for any parameter in a Set command, you can query it with the corresponding Get command provided that the default setting has not been changed by Set command. If the default setting had been changed by Set command, contact Quectel Technical Support ([support@quectel.com](mailto:support@quectel.com)) to get the default setting if necessary.

**2.3.11. PQTMCFGPPS**

Sets/gets the PPS feature.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGPPS,W,<Index>,<Enable>,<Duration>,<Mode>,<Polarity>,<Reserved>*<Checksum><CR><LF>
//Get:
$PQTMCFGPPS,R,<Index>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<Index>	Numeric	-	PPS index. 1 = PPS1
<Enable>	Numeric	-	Enable/disable PPS output. 0 = Disable 1 = Enable Note that if <b>&lt;Enable&gt;</b> is set to 0, the fields after <b>&lt;Enable&gt;</b> should be omitted.
<Duration>	Numeric	ms	Pulse duration. Range: 0–900 (Default value: 100)
<Mode>	Numeric	-	PPS output mode. 1 = PPS always output 2 = PPS output only in 2D/3D fix mode
<Polarity>	Numeric	-	Pulse polarity. 0 = Low 1 = High
<Reserved>	Numeric	-	Reserved. Always 0.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGPPS,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGPPS,OK,<Index>,<Enable>,<Duration>,<Mode>,<Polarity>,<Reserved>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGPPS,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).



**Example:**

```
//Set PPS1 feature:
$PQTMCFGPPS,W,1,1,100,1,1,0*73
$PQTMCFGPPS,OK*21

//Get PPS1 feature:
$PQTMCFGPPS,R,1*6A
$PQTMCFGPPS,OK,1,1,100,1,1,0*20

//Disable PPS1 feature:
$PQTMCFGPPS,W,1,0*73
$PQTMCFGPPS,OK*21
```

**2.3.12. PQTMCFGPROT**

Sets/gets the input and output protocol for a specified port.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGPROT,W,<PortType>,<PortID>,<InputProt>,<OutputProt>* <Checksum><CR><LF>
//Get:
$PQTMCFGPROT,R,<PortType>,<PortID>* <Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<PortType>	Numeric	-	Port type. 1 = UART
<PortID>	Numeric	-	Port ID. If <PortType> is set to 1, the <PortID> range: 1–3 1 = UART1 2 = UART2 3 = UART3
<InputProt>	Hexadecimal	-	Input protocol.(32 bit) Bit 0 = NMEA Bit 2 = RTCM3

Field	Format	Unit	Description
			When the port is UART1 to UART3, default input protocols are NMEA and RTCM3 (corresponding value: 00000005).
<OutputProt>	Hexadecimal	-	Output protocol. (32 bit) Bit 0 = NMEA Bit 2 = RTCM3 When the port is UART1 to UART 3, default output protocols are NMEA and RTCM3 (corresponding value: 00000005).

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGPROT,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGPROT,OK,<PortType>,<PortID>,<InputProt>,<OutputProt>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGPROT,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

**Example:**

```
//Set:
$PQTMCFGPROT,W,1,1,00000005,00000005*38
$PQTMCFGPROT,OK*6B

//Get:
$PQTMCFGPROT,R,1,1*3D
$PQTMCFGPROT,OK,1,1,00000005,00000005*6B
```

**2.3.13. PQTMCFGNMEADP**

Sets/gets the decimal places of standard NMEA messages.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGNMEADP,W,<UTC_DP>,<POS_DP>,<ALT_DP>,<DOP_DP>,<SPD_DP>,<COG_DP>*<Checksum><CR><LF>
//Get:
$PQTMCFGNMEADP,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<UTC_DP>	Numeric	-	Number of decimal places for UTC seconds in Standard NMEA messages. Range: 0–3. Default value: 3. 0 = No fractional part
<POS_DP>	Numeric	-	Number of decimal places for latitude and longitude in Standard NMEA messages. Range: 0–8. Default value: 8. 0 = No fractional part
<ALT_DP>	Numeric	-	Number of decimal places for altitude and geoidal separation in Standard NMEA messages. Range: 0–3. Default value: 3. 0 = No fractional part
<DOP_DP>	Numeric	-	Number of decimal places for DOP in Standard NMEA messages. Range: 0–3. Default value: 2. 0 = No fractional part
<SPD_DP>	Numeric	-	Number of decimal places for speed in Standard NMEA messages. Range: 0–3. Default value: 3. 0 = No fractional part
<COG_DP>	Numeric	-	Number of decimal places for COG in Standard NMEA messages. Range: 0–3. Default value: 2. 0 = No fractional part

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGNMEADP,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGNMEADP,OK,<UTC_DP>,<POS_DP>,<ALT_DP>,<DOP_DP>,<SPD_DP>,<COG_DP>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGNMEADP,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set:
$PQTMCFGNMEADP,W,3,8,3,2,3,2*39
$PQTMCFGNMEADP,OK*61

//Get:
$PQTMCFGNMEADP,R*37
$PQTMCFGNMEADP,OK,3,8,3,2,3,2*6A
```

**2.3.14. PQTMEPE**

Outputs the estimated position error.

**Type:**

Output

**Synopsis:**

```
$PQTMEPE,<MsgVer>,<EPE_North>,<EPE_East>,<EPE_Down>,<EPE_2D>,<EPE_3D>*<Checksum>
<CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 2 for this version.
<EPE_North>	Numeric	Meter	Estimated north error.
<EPE_East>	Numeric	Meter	Estimated east error.
<EPE_Down>	Numeric	Meter	Estimated down error.
<EPE_2D>	Numeric	Meter	Estimated 2D positioning error.
<EPE_3D>	Numeric	Meter	Estimated 3D positioning error.

**Example:**

```
$PQTMEPE,2,1.000,1.000,1.000,1.414,1.732*52
```

**2.3.15. PQTMCFGMSGRATE**

Sets/gets the message output rate on the current interface.

**Type:**


Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGMSGRATE,W,<MsgName>,<Rate>[,<MsgVer/Offset>]*<Checksum><CR><LF>
//Get:
$PQTMCFGMSGRATE,R,<MsgName>[,<MsgVer/Offset>]*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgName>	String/Hex	-	Message name. See <a href="#">Table 5: Supported Messages</a> .
<Rate>	Numeric	-	Message output rate. 0 = Not output. N = Output once every N position fix(es). For details on the range of N, See <a href="#">Table 5: Supported Messages</a> .
<MsgVer/Offset>	Numeric	-	<ul style="list-style-type: none"> <li>The parameter is the message version for PQTM messages.</li> <li>The parameter is the time offset for RTCM MSM messages. For illustration of time offset, see <a href="#">Figure 2: RTCM MSM Time Offset</a>.</li> <li>The parameter is omitted for others messages, such as standard NMEA messages, <b>RTCM3-1005</b>, <b>RTCM3-1006</b>, <b>RTCM3-1019</b>.</li> </ul> Range: <ul style="list-style-type: none"> <li>Range of PQTM message version depends on the specific message.</li> <li>Range of RTCM3 MSM time offset: 0 to &lt;Rate&gt; - 1.</li> </ul>

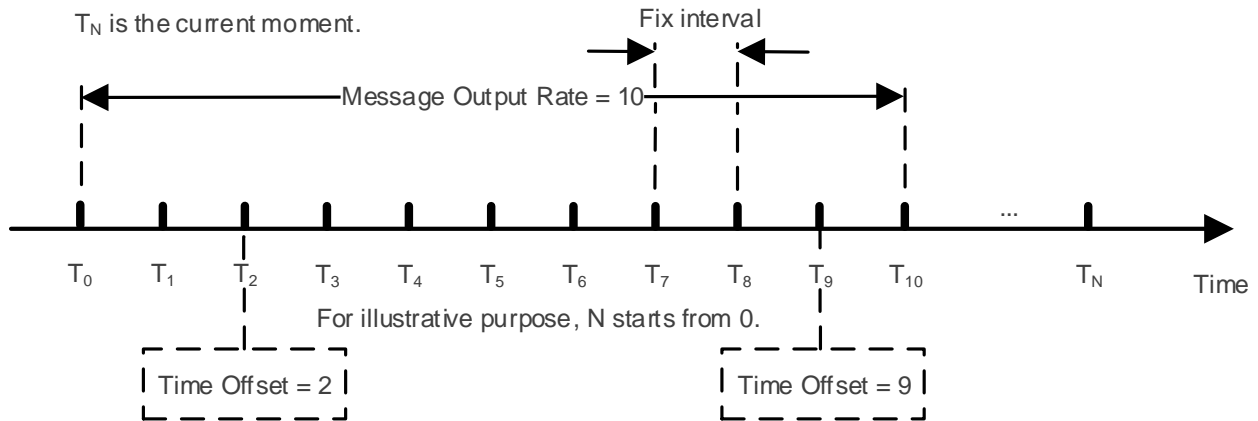

Note: If the time offset of RTCM MSM messages is 2, those messages will be output at this moment.

**Figure 2: RTCM MSM Time Offset**

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGMSGRATE,OK*<CR><LF>
//Response to Get command:
$PQTMCFGMSGRATE,OK,<MsgName>,<Rate>[,<MsgVer/Offset>]*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGMSGRATE,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

**Example:**

```
//Set the output rate of GGA message to once every position fix:
$PQTMCFGMSGRATE,W,GGA,1*0A
$PQTMCFGMSGRATE,OK*29

//Get the output rate of GGA message:
$PQTMCFGMSGRATE,R,GGA*12
$PQTMCFGMSGRATE,OK,GGA,1,*75

//Set the output rate of PQTMEPE (version 2) message to once every position fix:
$PQTMCFGMSGRATE,W,PQTMEPE,1,2*1D
```

```

$PQTMCFGMSGRATE,OK*29

//Get the output rate of PQTMEPE (version 2) message:
$PQTMCFGMSGRATE,R,PQTMEPE,2*05
$PQTMCFGMSGRATE,OK,PQTMEPE,1,2*4E

//Set the output rate of RTCM3-1005 message to once every position fix:
$PQTMCFGMSGRATE,W,RTCM3-1005,1*59
$PQTMCFGMSGRATE,OK*29

//Get the output rate of RTCM3-1005 message:
$PQTMCFGMSGRATE,R,RTCM3-1005*41
$PQTMCFGMSGRATE,OK,RTCM3-1005,1*0A

//Set the output rate of RTCM3 GPS MSM message to once every position fix and time offset to 0:
$PQTMCFGMSGRATE,W,RTCM3-107X,1,0*2F
$PQTMCFGMSGRATE,OK*29

//Get the output rate of RTCM3 GPS MSM message:
$PQTMCFGMSGRATE,R,RTCM3-107X*2B
$PQTMCFGMSGRATE,OK,RTCM3-107X,1,0*7C

//Set the output rate of RTCM GPS EPH message to once every position fix:
$PQTMCFGMSGRATE,W,RTCM3-1019,1*54
$PQTMCFGMSGRATE,OK*29

//Get the output rate of RTCM GPS EPH message:
$PQTMCFGMSGRATE,R,RTCM3-1019*4C
$PQTMCFGMSGRATE,OK,RTCM3-1019,1*07
    
```

**Table 5: Supported Messages**

Message	Description	Range (N)
RMC	-	1
GGA	-	1
GSV	-	1

Message	Description	Range (N)
GSA	-	1
VTG	-	1
GLL	-	1
PQTMEPE	-	1
PQTMVEL	-	1
PQTMGEOFENCESTATUS	-	1
PQMTTXT	-	1
PQTMVINSTATUS	-	1
PQTMPVT	-	1
PQTMDOF	-	1
PQTMPL	-	1
PQTMODO	-	1
RTCM3-1005	-	1–1200
RTCM3-1006	-	1–1200
RTCM3-107X	GPS-MSM	1–1200
RTCM3-108X	GLONASS-MSM	1–1200
RTCM3-109X	Galileo-MSM	1–1200
RTCM3-111X	QZSS-MSM	1–1200
RTCM3-112X	BDS-MSM	1–1200
RTCM3-113X	NavIC/IRNSS-MSM	1–1200
RTCM3-1019	GPS-EPH	1
RTCM3-1020	GLONASS-EPH	1
RTCM3-1041	NavIC/IRNSS-EPH	1
RTCM3-1042	BDS-EPH	1
RTCM3-1044	QZSS-EPH	1
RTCM3-1046	Galileo I/NAV-EPH	1



**NOTE**

1. If the configuration message is a PQTM message, use **<MsgVer>** field to specify the message version, otherwise an error will be returned.
2. If the configuration message is a standard NMEA message/RTCM message (excluding RTCM MSM message), or it is unnecessary to set the message version, the **<MsgVer>** field can be omitted.
3. All RTCM MSM messages have the same **<Rate>** value and only the last setting is valid. For details on RTCM MSM messages, see [Chapter 3 RTCM Protocol](#). The epoch time is aligned to **<FixInterval>** x **<Rate>**. For details on **<FixInterval>**, see [Chapter 2.3.28 PQTMCFGFIXRATE](#).
4. The output time for RTCM MSM messages is influenced by the **<Offset>** value via the formula: Output Time = **<FixInterval>** x **<Rate>** + **<FixInterval>** x **<Offset>**. If the **<Offset>** in other previously configured messages exceeds the range from 0 to **<Rate>** - 1 due to reconfiguring **<Rate>** in new messages, it is necessary to change the **<Offset>** in the conflicting messages to 0. This process is automatically implemented by software.
5. The RTCM EPH message output rate is independent of the **<FixInterval>**.
6. The message output rate of **GSA** and **GSV** messages is fixed at 1 Hz and independent of **<FixInterval>**.

**2.3.16. PQTMVEL**

Outputs the velocity information.

**Type:**

Output

**Synopsis:**

```
$PQTMVEL,<MsgVer>,<Time>,<VelN>,<VelE>,<VelD>,<GrdSpd>,<Spd>,<Heading>,<GrdSpdAcc>,<SpdAcc>,<HeadingAcc>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.
<Time>	hhmmss.sss	-	UTC time. hh: Hours (0–23) mm: Minutes (0–59) ss: Seconds (0–59) sss: Decimal fraction of seconds
<VelN>	Numeric	m/s	North velocity.

Field	Format	Unit	Description
<VelE>	Numeric	m/s	East velocity.
<VelD>	Numeric	m/s	Down velocity.
<GrdSpd>	Numeric	m/s	2D speed.
<Spd>	Numeric	m/s	3D speed.
<Heading>	Numeric	Degree	Heading.
<GrdSpdAcc>	Numeric	m/s	Estimated 2D speed accuracy.
<SpdAcc>	Numeric	m/s	Estimated 3D speed accuracy.
<HeadingAcc>	Numeric	Degree	Estimated heading accuracy.

**Example:**

```
$PQTMVEL,1,154512.100,1.251,2.452,1.245,2.752,3.021,180.512,0.124,0.254,0.250*67
```

**2.3.17. PQTMCFGGEOFENCE**

Sets/gets geofence feature.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGGEOFENCE,W,<Index>,<Mode>,<Reserved>,<Shape>,<Lat0>,<Lon0>,<Lat1/Radius>[,<Lon1>,<Lat2>,<Lon2>,<Lat3>,<Lon3>]*<Checksum><CR><LF>
//Get:
$PQTMCFGGEOFENCE,R,<Index>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<Index>	Numeric	-	Geofence index. Range: 0–3
<Mode>	Numeric	-	Geofence mode. 0 = Disable 1 = Enable

Field	Format	Unit	Description
<Reserved>	Numeric	-	Reserved. Always 0.
<Shape>	Numeric	-	Geofence shape. 0 = Circle defined by the center and the radius 1 = Circle defined by the center and a point on the circle 2 = Triangle 3 = Quadrangle (such as square, rectangle, trapezium)
<Lat0>	Numeric	Degree	Latitude of the first point.
<Lon0>	Numeric	Degree	Longitude of the first point.
<Lat1/Radius>	Numeric	Degree/Meter	If the geofence shape is a circle with a certain radius, this value will be the radius of the circle; otherwise, this value will be the latitude of the second point.
<Lon1>	Numeric	Degree	Longitude of the second point.
<Lat2>	Numeric	Degree	Latitude of the third point.
<Lon2>	Numeric	Degree	Longitude of the third point.
<Lat3>	Numeric	Degree	Latitude of the fourth point.
<Lon3>	Numeric	Degree	Longitude of the fourth point.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGGEOFENCE,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGGEOFENCE,OK,<Index>,<Mode>,<Reserved>,<Shape>,<Lat0>,<Lon0>,<Lat1/Radius>[,<Lon1>,<Lat2>,<Lon2>,<Lat3>,<Lon3>]*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGGEOFENCE,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set and enable a geofence.
$PQTMCFGGEOFENCE,W,0,1,0,0,31.451248,117.451245,100.5*18
$PQTMCFGGEOFENCE,OK*74

//Disable a geofence.
$PQTMCFGGEOFENCE,W,0,0*27
$PQTMCFGGEOFENCE,OK*74

//Get the configuration of a geofence.
$PQTMCFGGEOFENCE,R,0*3E
//Geofence is enabled whose shape is a circle defined by the center and the radius.
$PQTMCFGGEOFENCE,OK,0,1,0,0,31.451248,117.451245,100.5*4B

//Get the configuration of a geofence.
$PQTMCFGGEOFENCE,R,0*3E
//Geofence is disabled.
$PQTMCFGGEOFENCE,OK,0,0*74
```

**NOTE**

1. When the geofence is disabled, the fields after **<Mode>** in the Set command should be omitted. If geofence has been disabled, the fields after **<Mode>** in the module response will be omitted when retrieving the configuration of the geofence. See the example above for details.
2. If the number of input points exceeds the number of points that the shape should have, an error will be returned.
3. The latitude range is [-90,+90], where negatives indicate south latitude. The longitude range is [-180,+180], where negative values indicate west longitude.

**2.3.18. PQTMGEOFENCESTATUS**

Outputs the geofence status.

**Type:**

Output

**Synopsis:**

```
$PQTMGEOFENCESTATUS, <MsgVer>,<Time>{,<StateN>}*Checksum<CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.
<Time>	hhmmss.sss	-	UTC time. hh: Hours (0–23) mm: Minutes (0–59) ss: Seconds (0–59) sss: Decimal fraction of seconds
Start of repeat block. Repeat times: 4.			
<StateN>	Numeric	-	Geofence state: (N is the number of <State>. Range of N: 0–3.) 0 = Unknow 1 = Inside the geofence 2 = Outside the geofence Note: If the module did not get a fixed, the <StateN> should be 0.
End of repeat block.			

**Example:**

```
$PQTMGEOFENCESTATUS,1,124521.000,1,2,2,2*27
```

**2.3.19. PQTMGNSSSTART**

Starts GNSS engine.

**Type:**

Command

**Synopsis:**

```
$PQTMGNSSSTART* <Checksum> <CR> <LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMGNSSSTART,OK* <Checksum> <CR> <LF>
```

- If failed, the module returns:

```
$PQTMGNSSSTART,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
$PQTMGNSSSTART*51
$PQTMGNSSSTART,OK*79
```

### 2.3.20. PQTMGNSSSTOP

Stops GNSS engine.

**Type:**

Command

**Synopsis:**

```
$PQTMGNSSSTOP*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMGNSSSTOP,OK*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMGNSSSTOP,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
$PQTMGNSSSTOP*09
$PQTMGNSSSTOP,OK*21
```

### 2.3.21. PQTMTXT

Outputs short text messages. Long text messages can be transmitted by multiple messages.

**Type:**

Output

**Synopsis:**

```
$PQTMTEXT,<MsgVer>,<TotalNumSen>,<SenNum>,<TextID>,<Text>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.
<TotalNumSen>	Numeric	-	Total number of sentences. Range: 01–99.
<SenNum>	Numeric	-	Sentence number. Range: 01–<TotalNumSen>.
<TextID>	Numeric	-	Text identifier. 01 = Notice 02 = Warning 03 = Error
<Text>	String	-	Text message. Up to 57 characters including any code delimiters.

**Example:**

```
//Outputs debug data.
$PQTMTEXT,1,01,01,01,0x105f0cf810417c00*1B
```

**2.3.22. PQTMCFGSVIN**

Sets/gets the Survey-in feature. This feature can determine the antenna location either by Survey-in mode or Fixed mode.

In order to work as a base station, the module external antenna should be mounted on a static point (try to mount it with a clear sky visibility). The antenna accurate coordinate location can be acquired through a self-survey process. The Survey-in mode (<Mode> = 1) determines the receiver’s position by building a weighted mean of all valid 3D positioning solutions. You can set values of <CFG\_CNT> and <3D\_AccLimit> to define the minimum positioning times and 3D position standard deviation used for the position estimation. The Fixed mode (<Mode> = 2) requires user to manually enter the receiver position coordinates. Any error in the base station position will translate directly into rover position error.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGSVIN,W,<Mode>,<CFG_CNT>,<3D_AccLimit>,<ECEF_X>,<ECEF_Y>,<ECEF_Z>*<Checksum><CR><LF>
//Get:
$PQTMCFGSVIN,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<Mode>	Numeric	-	Receiver mode. 0 = Disable 1 = Survey-in mode 2 = Fixed mode (APR position is given in ECEF Coordinate)
<CFG_CNT>	Numeric	-	Minimum positioning times in Survey-in mode. Range: 0–86400.
<3D_AccLimit>	Numeric	Meter	Limit 3D positioning accuracy in Survey-in mode. If this field is 0, it means there is no limit on 3D positioning accuracy.
<ECEF_X>	Numeric	Meter	WGS84 ECEF X coordinate.
<ECEF_Y>	Numeric	Meter	WGS84 ECEF Y coordinate.
<ECEF_Z>	Numeric	Meter	WGS84 ECEF Z coordinate.

**Result:**

- If successful, the module returns:

```
//Response to Set command :
$PQTMCFGSVIN,OK*<Checksum><CR><LF>
//Response to Get command :
$PQTMCFGSVIN,OK,<Mode>,<CFG_CNT>,<3D_AccLimit>,<ECEF_X>,<ECEF_Y>,<ECEF_Z>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGSVIN,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).



**Example:**

```
//Set:
$PQTMCFGSVIN,W,1,3600,1.2,-2519265.0514,4849534.9045,3277834.6432*01
$PQTMCFGSVIN,OK*70

//Get:
$PQTMCFGSVIN,R*26
$PQTMCFGSVIN,OK,1,3600,1.2,-2519265.0514,4849534.9045,3277834.6432*52
```

**2.3.23. PQTMSVINSTATUS**

Outputs the Survey-in status.

**Type:**

Output

**Synopsis:**

```
$PQTMMSVINSTATUS,<MsgVer>,<TOW>,<Valid>,<Res0>,<Res1>,<Obs>,<CfgDur>,<MeanX>,<MeanY>,<MeanZ>,<MeanAcc>* <Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.
<TOW>	Numeric	ms	GPS time of week.
<Valid>	Numeric	-	Survey-in position validity flag. 0 = Invalid 1 = In-progress 2 = Valid
<Res0>	Numeric	-	Reserved. Always null.
<Res1>	Numeric	-	Reserved.
<Obs>	Numeric	-	Number of position observations used during Survey-in.
<CfgDur>	Numeric	-	Same as <CFG_CNT> field (minimum positioning times in Survey-in mode) configured via <b>PQTMCFGSVIN</b> command.
<MeanX>	Numeric	Meter	Current Survey-in mean position along X axis of

Field	Format	Unit	Description
			ECEF coordinate system.
<MeanY>	Numeric	Meter	Current Survey-in mean position along Y axis of ECEF coordinate system.
<MeanZ>	Numeric	Meter	Current Survey-in mean position along Z axis of ECEF coordinate system.
<MeanAcc>	Numeric	Meter	Current Survey-in mean position accuracy.

**Example:**

```
$PQTMSTATUS,1,1000,1,,01,20,100,-2484434.3645,4875976.9741,3266161.3412,1.2415*3C
```

**NOTE**

The module must be Base station mode to execute this command. For details on base station mode, see [Chapter 2.3.25 PQTMCFGRCVRMODE](#).

**2.3.24. PQTMPVT**

Outputs the PVT (GNSS only) result.

**Type:**

Output

**Synopsis:**

```
$PQTMPVT,<MsgVer>,<TOW>,<Date>,<Time>,<Res>,<FixType>,<NumSV>,<LeapS>,<Lat>,<Lon>,<Alt>,<Sep>,<VelN>,<VelE>,<VelD>,<Spd>,<Heading>,<HDOP>,<PDOP>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.
<TOW>	Numeric	ms	Time of week.
<Date>	YYYYMMDD	-	UTC date. YYYY: Year MM: Month DD: Day of month
<Time>	hhmmss.sss	-	UTC time.

Field	Format	Unit	Description
			hh: Hours (0–23) mm: Minutes (0–59) ss: Seconds (0–59) sss: Decimal fraction of seconds
<Res>	Numeric	-	Reserved.
<FixType>	Numeric	-	Fix mode. 0 = No fix. 1 = Reserved. 2 = 2D fix. 3 = 3D fix.
<NumSV>	Numeric	-	Number of satellites in use.
<LeapS>	Numeric	Second	Leap seconds. Null if this field is invalid.
<Lat>	Numeric	Degree	Latitude. Null if this field is invalid.
<Lon>	Numeric	Degree	Longitude. Null if this field is invalid.
<Alt>	Numeric	Meter	Altitude above mean sea level. Null if this field is invalid.
<Sep>	Numeric	Meter	Geoidal separation (the difference between the WGS84 earth ellipsoid surface and the mean-sea-level surface). Null if this field is invalid.
<VelN>	Numeric	m/s	North velocity. Null if this field is invalid.
<VelE>	Numeric	m/s	East velocity. Null if this field is invalid.
<VelD>	Numeric	m/s	Down velocity. Null if this field is invalid.
<Spd>	Numeric	m/s	Ground speed. Null if this field is invalid.
<Heading>	Numeric	Degree	Heading. Null if this field is invalid.
<HDOP>	Numeric	-	Horizontal dilution of precision. 99.99 if this field is invalid.
<PDOP>	Numeric	-	Position (3D) dilution of precision. 99.99 if this field is invalid.

**Example:**

```
//No fix:
$PQTMPVT,1,1000,20221225,163355.000,,0,00,,,,,,,,,99.99,99.99*79
//3D fix:
$PQTMPVT,1,31075000,20221225,083737.000,,3,09,18,31.12738291,117.26372910,34.212,5.267,3.21
2,2.928,0.238,4.346,34.12,2.16,4.38*51
```

### 2.3.25. PQTMCFGRCVRMODE

Sets/gets the receiver working mode.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGRCVRMODE,W,<Mode>*<Checksum><CR><LF>
/Get:
$PQTMCFGRCVRMODE,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<Mode>	Numeric	-	Receiver working mode. 0 = Unknow <u>1</u> = Rover. When set to this mode, the receiver will restore to default NMEA message output state. 2 = Base station. When set to this mode, the receiver will automatically disable NMEA message output and enable RTCM MSM4 and <b>RTCM3-1005</b> message output.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGRCVRMODE,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGRCVRMODE,OK,<Mode>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGRCVRMODE,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set:
$PQTMCFGRCVRMODE,W,2*29
$PQTMCFGRCVRMODE,OK*64

//Get:
$PQTMCFGRCVRMODE,R*32
$PQTMCFGRCVRMODE,OK,2*7A
```

**NOTE**

After switching the module's working mode, save the configuration and then reset the module. Otherwise, it will continue to operate in the original mode.

**2.3.26. PQTMDEBUGON**

Enables debug log output. The debug state can be saved by **PQTMSAVEPAR** command.

**Type:**

Command

**Synopsis:**

```
$PQTMDEBUGON*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMDEBUGON,OK*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMDEBUGON,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

Example:

```
$PQTMDEBUGON*48
$PQTMDEBUGON,OK*60
```

### 2.3.27. PQTMDEBUGOFF

Disables debug log output. The debug state can be saved by **PQTMSAVEPAR** command.

**Type:**

Command

**Synopsis:**

```
$PQTMDEBUGOFF*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMDEBUGOFF,OK*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMDEBUGOFF,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

Example:

```
$PQTMDEBUGOFF*06
$PQTMDEBUGOFF,OK*2E
```

### 2.3.28. PQTMCFGFIXRATE

Sets/gets the fix interval.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGFIXRATE,W,<FixInterval>*<Checksum><CR><LF>
//Get:
$PQTMCFGFIXRATE,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<FixInterval>	Numeric	ms	Fix interval.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGFIXRATE,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGFIXRATE,OK,<FixInterval>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGFIXRATE,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set:
$PQTMCFGFIXRATE,W,1000*59
$PQTMCFGFIXRATE,OK*27

//Get:
$PQTMCFGFIXRATE,R*71
$PQTMCFGFIXRATE,OK,1000*0A
```

**NOTE**

The fix rate of the module is 1 Hz and cannot be changed in Base station mode. In Rover mode, the fix rate is 10 Hz before changing the default value. For details on base station and Rover, see [Chapter 2.3.25 PQTMCFGRCVRLMODE](#).

### 2.3.29. PQTMCFGRTK

Sets/gets the RTK mode.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGRTK,W,<DiffMode>,<RelMode>*<Checksum><CR><LF>
//Get:
$PQTMCFGRTK,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<DiffMode>	Numeric	-	Differential mode. 0 = Disable RTK/RTD feature. Differential data is not used. 1 = Auto mode. 2 = RTD only mode. Only pseudoranges is used.
<RelMode>	Numeric	-	Absolute/relative mode. 1 = Absolute mode, ensure absolute position accuracy. 2 = Relative mode, ensure relative position accuracy. Note: This field only takes effect when <DiffMode> = 1 and the module enters the RTK only mode.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGRTK,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGRTK,OK,<DiffMode>,<RelMode>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGRTK,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).



**Example:**

```
//Set:
$PQTMCFGRTK,W,1,1*6C
$PQTMCFGRTK,OK*3F

//Get:
$PQTMCFGRTK,R*69
$PQTMCFGRTK,OK,1,1*3F
```

**2.3.30. PQTMCFGCNST**

Sets/gets the constellation configuration.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGCNST,W,<GPS>,<GLONASS>,<Galileo>,<BDS>,<QZSS>,<NavIC>*<Checksum><CR><LF>

//Get:
$PQTMCFGCNST,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<GPS>	Numeric	-	Enable/disable GPS. 0 = Disable <u>1</u> = Enable
<GLONASS>	Numeric	-	Enable/disable GLONASS. 0 = Disable <u>1</u> = Enable
<Galileo>	Numeric	-	Enable/disable Galileo. 0 = Disable <u>1</u> = Enable
<BDS>	Numeric	-	Enable/disable BDS. 0 = Disable <u>1</u> = Enable
<QZSS>	Numeric	-	Enable/disable QZSS. 0 = Disable

Field	Format	Unit	Description
			<u>1</u> = Enable
<NavIC>	Numeric	-	Enable/disable NavIC. 0 = Disable. <u>1</u> = Enable.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGCNST,OK*<CR><LF>
//Response to Get command:
$PQTMCFGCNST,OK,<GPS>,<GLONASS>,<Galileo>,<BDS>,<QZSS>,<NavIC>*<CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGCNST,ERROR,<ErrCode>*<CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set the constellation configuration.
$PQTMCFGCNST,W,1,1,1,1,0*2B
$PQTMCFGCNST,OK*78

//Get the constellation configuration.
$PQTMCFGCNST,R*2E
$PQTMCFGCNST,OK,1,1,1,1,0*78
```

**2.3.31. PQTMDOP**

Outputs dilution of precision.

**Type:**

Output

**Synopsis:**

```
$PQTMMDOP,<MsgVer>,<TOW>,<GDOP>,<PDOP>,<TDOP>,<VDOP>,<HDOP>,<NDOP>,<EDOP>*<CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.
<TOW>	Numeric	ms	Time of week. Null if this field is invalid.
<GDOP>	Numeric	-	Geometric dilution of precision. 99.99 if this field is invalid.
<PDOP>	Numeric	-	Position (3D) dilution of precision. 99.99 if this field is invalid.
<TDOP>	Numeric	-	Time dilution of precision. 99.99 if this field is invalid.
<VDOP>	Numeric	-	Vertical dilution of precision. 99.99 if this field is invalid.
<HDOP>	Numeric	-	Horizontal dilution of precision. 99.99 if this field is invalid.
<NDOP>	Numeric	-	Northing dilution of precision. 99.99 if this field is invalid.
<EDOP>	Numeric	-	Easting dilution of precision. 99.99 if this field is invalid.

**Example:**

```
//Fixed:
$PQTMDOp,1,570643000,1.01,0.88,0.49,0.73,0.50,0.36,0.35*7C

//No fix:
$PQTMDOp,1,,99.99,99.99,99.99,99.99,99.99,99.99*70
```

**2.3.32. PQTMPL**

Outputs protection level information.

**Type:**

Output

**Synopsis:**

```
$PQTMPL,<MsgVer>,<TOW>,<PUL>,<Res1>,<Res2>,<PL_PosN>,<PL_PosE>,<PL_PosD>,<PL_VelN>,<PL_VelE>,<PL_VelD>,<Res3>,<Res4>,<PL_Time>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Numeric	-	Message version. Always 1 for this version.
<TOW>	Numeric	ms	Time of week. Null if this field is invalid.
<PUL>	Numeric	%	Probability of uncertainty level per epoch.
<Res1>	Numeric	-	Reserved. Always 1.
<Res2>	Numeric	-	Reserved. Always 1.
<PL_PosN>	Numeric	mm	Protection level of north position. Null if this field is invalid.
<PL_PosE>	Numeric	mm	Protection level of east position. Null if this field is invalid.
<PL_PosD>	Numeric	mm	Protection level of down position. Null if this field is invalid.
<PL_VelN>	Numeric	mm/s	Protection level of north velocity. Null if this field is invalid.
<PL_VelE>	Numeric	mm/s	Protection level of east velocity. Null if this field is invalid.
<PL_VelD>	Numeric	mm/s	Protection level of down velocity. Null if this field is invalid.
<Res3>	Numeric		Reserved. Always null.
<Res4>	Numeric		Reserved. Always null.
<PL_Time>	Numeric	ns	Protection level of time. Null if this field is invalid.

**Example:**

```
$PQTMPL,1,55045200,5.00,1,1,2879,2718,4766,5344,4323,10902,,,*1C
```

**2.3.33. PQTMCFGODO**

Sets/gets the odometer feature.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGODO,W,<State>,<InitDist>*<Checksum><CR><LF>
//Get:
$PQTMCFGODO,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<State>	Numeric	-	Odometer feature state. 0 = Disabled 1 = Enabled
<InitDist>	Numeric	Meter	Initial distance. Default value: 0.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGODO,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGODO,OK,<State>,<InitDist>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGODO,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set odometer feature:
$PQTMCFGODO,W,1,10.5*4E
$PQTMCFGODO,OK*36

//Get odometer feature:
$PQTMCFGODO,R*60
$PQTMCFGODO,OK,1,10.5*1D
```

### 2.3.34. PQTMRSETODO

Resets the accumulated distance recorded by the odometer.

**Type:**

Command

**Synopsis:**

```
$PQTMRSETODO*<Checksum><CR><LF>
```

**Parameter:**

None

**Result:**

- If successful, the module returns:

```
$PQTMRSETODO,OK*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMRSETODO,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

**Example:**

```
$PQTMRSETODO*09
$PQTMRSETODO,OK*21
```

**NOTE**

Reset the accumulated distance recorded by the odometer with **PQTMRSETODO** command or power off the module. Disabling the odometer feature with **PQTMCFGODO** command when the module is still working will stop distance calculation, but it cannot reset the distance to zero.

### 2.3.35. PQTMODO

Outputs the odometer information.

**Type:**

Output

**Synopsis:**

```
$PQTMODO,<MsgVer>,<Time>,<State>,<Dist>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MsgVer>	Character	-	Message version. Always 1 for this version.
<Time>	hhmmss.sss	-	UTC time. hh: Hours (00–23) mm: Minutes (00–59) ss: Seconds (00–59) sss: Decimal fraction of seconds
<State>	Numeric	-	Odometer status. 0 = Disabled 1 = Enabled
<Dist>	Numeric	Meter	Distance since last reset. The distance equals to the accumulated distance and the initial distance configured via <b>&lt;InitDist&gt;</b> in <b>PQTMCFGODO</b> command.

**Example:**

```
$PQTMODO,1,120635.000,1,112.3*6E
```

**NOTE**

1. **<Dist>** in **PQTMODO** represents the sum of **<InitDist>** value set in **PQTMCFGODO** and accumulated distance. The accumulated distance starts from 0 m and resets to 0 m after a power outage or when cleared with **PQTMRESETODO**. If **<InitDist>** value in the **PQTMCFGODO** is modified, the actual **<Dist>** output in **PQTMODO** will reflect the sum of the accumulated distance and the new **<InitDist>** value, as shown below:  
**<Dist> = Accumulated Distance + <InitDist>**.
2. Accumulated distance cannot be saved to NVM.

**2.3.36. PQTMCFG SIGNAL**

Sets/gets GNSS signal mask.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFG SIGNAL,W,<GPS_Sig>,<GLO_Sig>,<GAL_Sig>,<BDS_Sig>,<QZS_Sig>,<NAC_Sig>*<Checksum><CR><LF>
//Get:
$PQTMCFG SIGNAL,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<GPS_Sig>	Hexadecimal	-	GPS signal mask. 0 = Disable 1 = Enable Bit 0 = L1 C/A Bit 1 = L2C Bit 2 = L5-Q Default value: 0x07
<GLO_Sig>	Hexadecimal	-	GLONASS signal mask. 0 = Disable 1 = Enable Bit 0 = G1 C/A Bit 1 = G2 C/A Default value: 0x03
<GAL_Sig>	Hexadecimal	-	Galileo signal mask. 0 = Disable 1 = Enable Bit 0 = E1 Bit 1 = E5a Bit 2 = E5b Bit 3 = E6 Default value: 0x0F
<BDS_Sig>	Hexadecimal	-	BDS signal mask. 0 = Disable 1 = Enable Bit 0 = B1I Bit 1 = B2I Bit 2 = B3I Bit 3 = B1C Bit 4 = B2a Bit 5 = B2b Default value: 0x3F
<QZS_Sig>	Hexadecimal	-	QZSS signal mask.



Field	Format	Unit	Description
			0 = Disable 1 = Enable Bit 0 = L1 C/A Bit 1 = L2C Bit 2 = L5-Q Default value: 0x07
<NAC_Sig>	Hexadecimal	-	NavIC signal mask. 0 = Disable 1 = Enable Bit 0 = L5 Default value: 0x01

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFG SIGNAL,OK* <Checksum><CR><LF>
//Response to Get command:
$PQTMCFG SIGNAL,OK,<GPS_Sig>,<GLO_Sig>,<GAL_Sig>,<BDS_Sig>,<QZS_Sig>,<NAC_Sig>* <Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFG SIGNAL,ERROR,<ErrCode>* <Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set GNSS signal mask:
$PQTMCFG SIGNAL,W,7,3,F,3F,7,1*0E
$PQTMCFG SIGNAL,OK*6C

//Get GNSS signal mask:
$PQTMCFG SIGNAL,R*3A
$PQTMCFG SIGNAL,OK,07,03,0F,3F,07,01*6D
```

**NOTE**

1. The L1 frequency bands of LG290P (03) module cannot be disabled.
2. The LG290P (03) module also supports GPS L1C and QZSS L1C frequency band which is still under development. Contact Quectel Technical Support ([support@quectel.com](mailto:support@quectel.com)) for details.
3. The priority of GNSS configuration commands: **PQTMCFGCNST** > **PQTMCFG SIGNAL** > **PQTMCFG SAT**. For instance, if the GPS constellation is disabled by **PQTMCFG CNST** command, the enabling of GPS constellation and the frequency bands in **PQTMCFG SIGNAL** and **PQTMCFG SAT** commands will be ineffective.

**2.3.37. PQTMCFG SAT**

Sets/gets GNSS satellite mask.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFG SAT,W,<SystemID>,<SignalID>,<MaskLow>[,<MaskHigh>]*<Checksum><CR><LF>
//Get:
$PQTMCFG SAT,R,<SystemID>,<SignalID>*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<SystemID>	Numeric	-	GNSS system ID. 1 = GPS 2 = GLONASS 3 = Galileo 4 = BDS 5 = QZSS 6 = NavIC
<SignalID>	Hexadecimal	-	GNSS signal ID. For GPS: 1 = L1 C/A 2 = L2C 3 = L5-Q  For GLONASS: 1 = G1 C/A

Field	Format	Unit	Description
			2 = G2 C/A
			For Galileo:
			1 = E1
			2 = E5a
			3 = E5b
			4 = E6
			For BDS:
			1 = B1I
			2 = B2I
			3 = B3I
			4 = B1C
			5 = B2a
			6 = B2b
			For QZSS:
			1 = L1 C/A
			2 = L2C
			3 = L5-Q
			For NavIC:
			1 = L5
			GNSS satellite low 32-bit mask, Bit 0 for the satellite PRN 1.
			0 = Disable
			1 = Enable
			Range:
			GPS: 0–0xFFFFFFFF
			GLONASS: 0–0x3FFF
			Galileo: 0–0xFFFFFFFF
			BDS: 0–0xFFFFFFFF
			QZSS: 0–0x3FFF
<MaskLow>	Hexadecimal	-	NavIC: 0–0x7FFF
			Default value:
			GPS L1 C/A: 0xFFFFFFFF
			GPS L2C: 0xFFC36FFD
			GPS L5-Q: 0xAFC227AD
			GLONASS G1 C/A: 0x00003FFF
			GLONASS G2 C/A: 0x00003FFF
			Galileo E1: 0x67967FDF
			Galileo E5a: 0x67967FDF

Field	Format	Unit	Description
			Galileo E5b: 0x67967FDF Galileo E6: 0x67967FDF BDS B1I: 0xBFFCBFFF BDS B2I: 0x0000BFFF BDS B3I: 0xBFFCBFFF BDS B1C: 0xBFFC0000 BDS B2a: 0xBFFC0000 BDS B2b: 0xBFFC0000 QZSS L1 C/A: 0x0000004E QZSS L2C: 0x0000004E QZSS L5-Q: 0x0000004E NavIC L5: 0x000001FF
<MaskHigh>	Hexadecimal	-	GNSS satellite high 32-bit mask, Bit 0 for the satellite PRN 33. (Only available for BDS and Galileo. It should be omitted for other GNSS systems). 0 = Disable 1 = Enable Range: GPS: None GLONASS: None Galileo: 0–0x0F BDS: 0–0xFFFFFFFF QZSS: None NavIC: None  Default value: Galileo E1: 0x0000000B Galileo E5a: 0x0000000B Galileo E5b: 0x0000000B Galileo E6: 0x0000000B BDS B1I: 0x1C003FFF BDS B2I: 0x00000000 BDS B3I: 0x1C003FFF BDS B1C: 0x00003FFF BDS B2a: 0x00003FFF BDS B2b: 0x1C003FFF

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGSAT,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGSAT,OK,<SystemID>,<SignalID>,<MaskLow>[,<MaskHigh>]*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGSAT,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about **<ErrCode>**, see [Table 4: Error Codes](#).

**Example:**

```
//Set GPS L1 C/A:
$PQTMCFGSAT,W,1,1,FFFFFFFF*4B
$PQTMCFGSAT,OK*34

//Get GPS L1 C/A:
$PQTMCFGSAT,R,1,1*62
$PQTMCFGSAT,OK,1,01,FFFFFFFF*28

//Set BDS B1I:
$PQTMCFGSAT,W,4,1,BFFCBFFF,1C003FFF*60
$PQTMCFGSAT,OK*34

//Get BDS B1I:
$PQTMCFGSAT,R,4,1*67
$PQTMCFGSAT,R,4,01,BFFCBFFF,1C003FFF*55
```

**NOTE**

The LG290P (03) module also supports GPS L1C and QZSS L1C frequency band which is still under development. Contact Quectel Technical Support ([support@quectel.com](mailto:support@quectel.com)) for details.

### 2.3.38. PQTMCFGRSID

Sets/gets the reference station ID.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGRSID,W,<ID>*<Checksum><CR><LF>
//Get:
$PQTMCFGRSID,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<ID>	Numeric	-	Reference station ID. Range: 0–4095. Default value: 290.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGRSID,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGRSID,OK,<ID>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGRSID,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set:
$PQTMCFGRSID,W,1024*06
$PQTMCFGRSID,OK*7E
//Get:
$PQTMCFGRSID,R*28
$PQTMCFGRSID,OK,1024*55
```

### 2.3.39. PQTMCFGRTCM

Sets/gets RTCM.

**Type:**

Set/Get

**Synopsis:**

```
//Set:
$PQTMCFGRTCM,W,<MSM_Type>,<MSM_Mode>,<MSM_ElevThd>,<Reserved>,<Reserved>,<EPH_
Mode>,<EPH_Interval>*<Checksum><CR><LF>
//Get:
$PQTMCFGRTCM,R*<Checksum><CR><LF>
```

**Parameter:**

Field	Format	Unit	Description
<MSM_Type>	Numeric	-	RTCM MSM type. Range: 3–7 (corresponding to RTCM MSM3–MSM7). Default value: 4.
<MSM_Mode>	Numeric	-	RTCM MSM output mode when no satellite is searched. Always 0. 0 = Not output RTCM MSM message when no satellite is searched.
<MSM_ElevThd>	Numeric	Degree	Satellite elevation threshold to report measurements by RTCM MSM messages. Range: [-90,90]. Default value: -90 (means no limitation).
<Reserved>	Numeric	-	Reserved. Default value: 07.
<Reserved>	Numeric	-	Reserved. Default value: 06.
<EPH_Mode>	Numeric	-	Ephemeris output mode. 0 = Disable 1 = Output when updating 2 = Output when updating and at regular intervals defined by <EPH_Interval> 3 = Output on each epoch
<EPH_Interval>	Numeric	Second	Ephemeris output interval. Only available when <EPH_Mode> = 2. Range: 0–7200. Default value: 0.

**Result:**

- If successful, the module returns:

```
//Response to Set command:
$PQTMCFGRTCM,OK*<Checksum><CR><LF>
//Response to Get command:
$PQTMCFGRTCM,OK,<MSM_Type>,<MSM_Mode>,<MSM_ElevThd>,<Reserved>,<Reserved>,<EPH_Mode>,<EPH_Interval>*<Checksum><CR><LF>
```

- If failed, the module returns:

```
$PQTMCFGRTCM,ERROR,<ErrCode>*<Checksum><CR><LF>
```

For details about <ErrCode>, see [Table 4: Error Codes](#).

**Example:**

```
//Set RTCM feature
$PQTMCFGRTCM,W,4,0,-90,07,06,1,0*25
$PQTMCFGRTCM,OK*7A
```



# 3 RTCM Protocol

The LG290P (03) GNSS module supports the RTCM protocol that is in accordance with *RTCM Standard 10403.3 Differential GNSS (Global Navigation Satellite Systems) Services - Version 3*. This protocol is used for transferring GNSS raw measurement data and is available from <https://www.rtcn.org/>.

**Table 6: Supported RTCM3 Messages**

Message Type	Mode	Message Name
1005	Input/Output	Stationary RTK Reference Station ARP
1006	Input/Output	Stationary RTK Reference Station ARP with height
1019	Input/Output	GPS Ephemerides
1020	Input/Output	GLONASS Ephemerides
1041	Input/Output	NavIC/IRNSS Ephemerides
1042	Input/Output	BDS Satellite Ephemeris Data
1044	Input/Output	QZSS Ephemerides
1046	Input/Output	Galileo I/NAV Satellite Ephemeris Data
1073	Input/Output	GPS MSM3
1074	Input/Output	GPS MSM4
1075	Input/Output	GPS MSM5
1076	Input/Output	GPS MSM6
1077	Input/Output	GPS MSM7
1083	Input/Output	GLONASS MSM3
1084	Input/Output	GLONASS MSM4
1085	Input/Output	GLONASS MSM5

Message Type	Mode	Message Name
1086	Input/Output	GLONASS MSM6
1087	Input/Output	GLONASS MSM7
1093	Input/Output	Galileo MSM3
1094	Input/Output	Galileo MSM4
1095	Input/Output	Galileo MSM5
1096	Input/Output	Galileo MSM6
1097	Input/Output	Galileo MSM7
1113	Input/Output	QZSS MSM3
1114	Input/Output	QZSS MSM4
1115	Input/Output	QZSS MSM5
1116	Input/Output	QZSS MSM6
1117	Input/Output	QZSS MSM7
1123	Input/Output	BDS MSM3
1124	Input/Output	BDS MSM4
1125	Input/Output	BDS MSM5
1126	Input/Output	BDS MSM6
1127	Input/Output	BDS MSM7
1133	Input/Output	NavIC/IRNSS MSM3
1134	Input/Output	NavIC/IRNSS MSM4
1135	Input/Output	NavIC/IRNSS MSM5
1136	Input/Output	NavIC/IRNSS MSM6
1137	Input/Output	NavIC/IRNSS MSM7

# 4 Appendix A References

**Table 7: Terms and Abbreviations**

Abbreviation	Description
2D	2 Dimension
3D	3 Dimension
ARP	Antenna Reference Point
C/N <sub>0</sub>	Carrier-to-Noise-Density Ratio
COG	Course over Ground
COGM	Course over Ground (in Magnetic North Course Direction)
COGT	Course over Ground (in True North Course Direction)
DOP	Dilution of Precision
EPH	Ephemeris
GGA	Global Positioning System Fix Data
GLL	Geographic Position - Latitude/Longitude
GLONASS	Global Navigation Satellite System (Russia)
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GSA	GNSS DOP and Active Satellites
GSV	GNSS Satellites in View
HDOP	Horizontal Dilution of Precision
IRNSS	Indian Regional Navigation Satellite System
MSM	Multiple Signal Messages

Abbreviation	Description
NavIC	Navigation with Indian Constellation
NMEA	NMEA (National Marine Electronics Association) 0183 Interface Standard
NVM	Non-Volatile Memory
PDOP	Position Dilution of Precision
PPS	Pulse Per Second
PRN	Pseudo-Random Noise
QZSS	Quasi-Zenith Satellite System
RMC	Recommended Minimum Specific GNSS Data
RTD	Real-Time Differential
RTK	Real-Time Kinematic
SBAS	Satellite-Based Augmentation System
SOG	Speed over Ground
SPS	Standard Positioning Service
TXT	Text
UART	Universal Asynchronous Receiver/Transmitter
UTC	Coordinated Universal Time
VDOP	Vertical Dilution of Precision
VTG	Course Over Ground and Ground Speed

# 5 Appendix B GNSS (NMEA) Numbering

**Table 8: GNSS Satellites (NMEA) Numbering**

GNSS Type	System ID	Satellite ID	Signal ID
GPS	1	1–32	1 = L1 C/A 6 = L2C 8 = L5-Q
GLONASS	2	65–96	1 = G1 C/A 3 = G2 C/A
Galileo	3	1–36	1 = E5a 2 = E5b 5 = E6 7 = E1
BDS	4	1–64	1 = B1I 3 = B1C 5 = B2a 6 = B2b 8 = B3I B = B2I
QZSS	5	1–10	1 = L1 C/A 6 = L2C 8 = L5-Q
NavIC (IRNSS)	6	1–15	1 = L5
SBAS	-	33–64	-

**NOTE**

The table above is only applicable to standard NMEA messages.

# 6 Appendix C Special Characters

Table 9: Special Characters

Special Character	Definition
<...>	Parameter name. Angle brackets do not appear in the message.
[...]	Optional field of a message. Square brackets do not appear in the message.
{...}	Repeated field of a message. Curly brackets do not appear in the message.
<u>Underline</u>	Default setting of a parameter.