

LG290P (03)

Base Station Mode Application Note

GNSS Module Series

Version: 1.0

Date: 2024-11-25

Status: Released



At Quectel, our aim is to provide timely and comprehensive services to our customers. If you require any assistance, please contact our headquarters:

Quectel Wireless Solutions Co., Ltd.

Building 5, Shanghai Business Park Phase III (Area B), No.1016 Tianlin Road, Minhang District, Shanghai 200233, China

Tel: +86 21 5108 6236

Email: info@quectel.com

Or our local offices. For more information, please visit:

<http://www.quectel.com/support/sales.htm>.

For technical support, or to report documentation errors, please visit:

<http://www.quectel.com/support/technical.htm>.

Or email us at: support@quectel.com.

Legal Notices

We offer information as a service to you. The provided information is based on your requirements and we make every effort to ensure its quality. You agree that you are responsible for using independent analysis and evaluation in designing intended products, and we provide reference designs for illustrative purposes only. Before using any hardware, software or service guided by this document, please read this notice carefully. Even though we employ commercially reasonable efforts to provide the best possible experience, you hereby acknowledge and agree that this document and related services hereunder are provided to you on an “as available” basis. We may revise or restate this document from time to time at our sole discretion without any prior notice to you.

Use and Disclosure Restrictions

License Agreements

Documents and information provided by us shall be kept confidential, unless specific permission is granted. They shall not be accessed or used for any purpose except as expressly provided herein.

Copyright

Our and third-party products hereunder may contain copyrighted material. Such copyrighted material shall not be copied, reproduced, distributed, merged, published, translated, or modified without prior written consent. We and the third party have exclusive rights over copyrighted material. No license shall be granted or conveyed under any patents, copyrights, trademarks, or service mark rights. To avoid ambiguities, purchasing in any form cannot be deemed as granting a license other than the normal non-exclusive, royalty-free license to use the material. We reserve the right to take legal action for noncompliance with abovementioned requirements, unauthorized use, or other illegal or malicious use of the material.

Trademarks

Except as otherwise set forth herein, nothing in this document shall be construed as conferring any rights to use any trademark, trade name or name, abbreviation, or counterfeit product thereof owned by Quectel or any third party in advertising, publicity, or other aspects.

Third-Party Rights

This document may refer to hardware, software and/or documentation owned by one or more third parties (“third-party materials”). Use of such third-party materials shall be governed by all restrictions and obligations applicable thereto.

We make no warranty or representation, either express or implied, regarding the third-party materials, including but not limited to any implied or statutory, warranties of merchantability or fitness for a particular purpose, quiet enjoyment, system integration, information accuracy, and non-infringement of any third-party intellectual property rights with regard to the licensed technology or use thereof. Nothing herein constitutes a representation or warranty by us to either develop, enhance, modify, distribute, market, sell, offer for sale, or otherwise maintain production of any our products or any other hardware, software, device, tool, information, or product. We moreover disclaim any and all warranties arising from the course of dealing or usage of trade.

Privacy Policy

To implement module functionality, certain device data are uploaded to Quectel’s or third-party’s servers, including carriers, chipset suppliers or customer-designated servers. Quectel, strictly abiding by the relevant laws and regulations, shall retain, use, disclose or otherwise process relevant data for the purpose of performing the service only or as permitted by applicable laws. Before data interaction with third parties, please be informed of their privacy and data security policy.

Disclaimer

- a) We acknowledge no liability for any injury or damage arising from the reliance upon the information.
- b) We shall bear no liability resulting from any inaccuracies or omissions, or from the use of the information contained herein.
- c) While we have made every effort to ensure that the functions and features under development are free from errors, it is possible that they could contain errors, inaccuracies, and omissions. Unless otherwise provided by valid agreement, we make no warranties of any kind, either implied or express, and exclude all liability for any loss or damage suffered in connection with the use of features and functions under development, to the maximum extent permitted by law, regardless of whether such loss or damage may have been foreseeable.
- d) We are not responsible for the accessibility, safety, accuracy, availability, legality, or completeness of information, advertising, commercial offers, products, services, and materials on third-party websites and third-party resources.

Copyright © Quectel Wireless Solutions Co., Ltd. 2024. All rights reserved.

Safety Information

The following safety precautions must be observed during all phases of operation, such as usage, service, or repair of any terminal or mobile incorporating the module. Manufacturers of the terminal should notify users and operating personnel of the following safety information by incorporating these guidelines into all product manuals. Otherwise, Quectel assumes no liability for customers' failure to comply with these precautions.



Ensure that the product may be used in the country and the required environment, as well as that it conforms to the local safety and environmental regulations.



Keep away from explosive and flammable materials. The use of electronic products in extreme power supply conditions and locations with potentially explosive atmospheres may cause fire and explosion accidents.



The product must be powered by a stable voltage source, and the wiring shall conform to security precautions and fire prevention regulations.



Proper ESD handling procedures must be followed throughout the mounting, handling and operation of any devices and equipment that incorporate the module to avoid ESD damages.

About the Document

Document Information

Title	LG290P (03) Base Station Mode Application Note
Subtitle	GNSS Module Series
Document Type	Application Note
Document Status	Released

Revision History

Version	Date	Description
-	2024-07-12	Creation of the document
1.0	2024-11-25	First official release

Contents

Safety Information.....	3
About the Document.....	4
Contents.....	5
Table Index.....	6
Figure Index.....	7
1 Introduction	8
2 Base Station Mode Introduction and Configuration	9
2.1. Base Station Mode Introduction.....	9
2.2. Base Station Mode Configuration	9
2.2.1. Base Station Mode Configuration	9
2.2.2. RTCM Configuration	11
2.2.3. Fixed Mode and Survey-in Mode Configuration	11
3 Base Station Mode Assembly and Usage	13
3.1. Base Station Hardware Assembly	13
3.1.1. Required Components	13
3.1.2. Base Station Assembly	14
3.2. Base Station Configuration	16
3.2.1. Manual Configuration of Base Station Coordinates by Fixed Mode.....	17
3.2.2. Automatic Convergence of Coordinates by Survey-in Mode.....	18
3.3. Data Transmission	20
3.3.1. Network Transmission.....	20
3.3.1.1. PC-based Network	20
3.3.1.2. Cellular-based Network	26
4 FAQs.....	32
5 Appendix References	33

Table Index

Table 1: Differences Between Rover Mode and Base Station Mode	10
Table 2: Related Documents.....	33
Table 3: Terms and Abbreviations	33

Figure Index

Figure 1: Base Station Antenna	13
Figure 2: Rover Antenna	14
Figure 3: Components for Base Station Assembly	14
Figure 4: Base Station Assembly – Front Side	15
Figure 5: Base Station Assembly – Back Side	15
Figure 6: Base Station Antenna Installation.....	16
Figure 7: Schematic Diagram of PC-based Network Connection	21
Figure 8: PC-based Network Connection	21
Figure 9: Opening NTRIP Caster	22
Figure 10: Configuring NTRIP Caster	22
Figure 11: Opening NTRIP Server	23
Figure 12: Configuring NTRIP Server	23
Figure 13: Successful Connection of NTRIP Server to NTRIP Caster	23
Figure 14: Opening NTRIP Client	24
Figure 15: Logging in to NTRIP Client (Obtaining Satellite Observation Data).....	24
Figure 16: Successful Connection of NTRIP Client to NTRIP Caster	25
Figure 17: Successful Enabling of Fixed Solution on Rover.....	25
Figure 18: Schematic Diagram of Cellular-based Network Connection	26
Figure 19: Cellular-Based Network Connection.....	27
Figure 20: Accessing EVB Console	28
Figure 21: Configuring NTRIP Server via EVB Console.....	28
Figure 22: Successful Connection of NTRIP Server to NTRIP Caster	29
Figure 23: Configuring NTRIP Client via EVB Console	30
Figure 24: Successful Connection of NTRIP Client to NTRIP Caster	30
Figure 25: EVB Jumper Cap	31
Figure 26: Successful Enabling of Fixed Solution on Rover.....	31

1 Introduction

The LG290P (03) is a quad-band, multi-constellation GNSS module that supports concurrent reception of GPS, GLONASS, Galileo, BDS, QZSS, and NavIC satellite signals and the SBAS (Satellite-Based Augmentation System). It has a built-in new-generation RTK engine with a maximum output frequency of 20 Hz. The LG290P (03) can operate in both rover mode and base station mode. This document describes how to use the LG290P (03) module in base station mode.

For the sake of simplicity and preciseness, the definitions of “base station” and “rover” are as follows.

- Base station: GNSS receiver broadcasting satellite observation data (RTCM) streams to the rover.
- Rover: GNSS receiver receiving satellite observation data (RTCM) streams broadcast from the base.

2 Base Station Mode Introduction and Configuration

2.1. Base Station Mode Introduction

The rover must receive the satellite observation data from the reference station to use the RTK function. The two most common mainstream reference stations are commercial VRS services or user-built base stations. User-built base stations are suitable for scenarios where the rover works within a short range (usually < 10 km from the base station). It can rely on the local area networks (radio, LoRa, etc.) to connect to the base station and get the GNSS satellite observation data necessary for RTK function. The absolute positioning accuracy of the rover is influenced by the accuracy of the base station location, so you need to know precise coordinates of the base station location to construct the base station.

The LG290P (03) module is designed for scenarios with user-built base stations. LG290P (03) uses the RTCM3.3 protocol to output base station positions, GNSS satellite observation data, as well as optional satellite ephemeris data.

2.2. Base Station Mode Configuration

This chapter outlines configuration methods and command examples for LG290P (03) module when it is operating in base station mode. For command details, see [document \[1\] protocol specification](#).

2.2.1. Base Station Mode Configuration

The LG290P (03) module operates in rover mode by default. The module operating mode can be switched through **PQTMCFGRCVRMODE** as shown in the following example:

Example:

```
//Set the module operating mode to base station mode
$PQTMCFGRCVRMODE,W,2*29
//Command executed successfully
$PQTMCFGRCVRMODE,OK*64

//Save configuration
$PQTMSAVEPAR*5A
//Command executed successfully
$PQTMSAVEPAR,OK*72
//Restart Module
```

NOTE

For the configuration set through **PQTMCFGRCVRMODE** to take effect, the configuration must be saved and the module must be restarted.

Once the module switches to the base station mode, it automatically turns off the NMEA 0183 protocol output and instead starts outputting satellite observation data and module location information in RTCM3.3 protocol format. The main differences are as follows:

Table 1: Differences Between Rover Mode and Base Station Mode

Item	Rover Mode	Base Station Mode
Output protocol	NMEA 0183	RTCM3.3
Output message ¹⁾	RMC, GGA, GSV, GSA, VTG, GLL	1005, MSM4
Update frequency ¹⁾	10 Hz	1 Hz

NOTE

- ¹⁾ Output message and update frequency may vary depending on the software version and configuration. Please refer to the actual firmware version for details.
- The differences listed are the default configurations for rover mode and base station mode.

2.2.2. RTCM Configuration

In the base station mode, the user can configure the RTCM through **PQTMCFGRTCM**, including the output message type (RTCM MSM3–MSM7) and output mode of the satellite observation data, the satellite elevation threshold, the ephemeris output mode and interval.

Example:

```
//Set module to output RTCM MSM4 with no limitation on elevation threshold and ephemeris output when updated
$PQTMCFGRTCM,W,4,0,-90,07,06,1,0*25
//Command executed successfully
$PQTMCFGRTCM,OK*7A

//Set module to output RTCM MSM7 with 5° elevation threshold and ephemeris output when updated and at 1-hour intervals.
$PQTMCFGRTCM,W,7,0,5,07,06,2,3600*01
//Command executed successfully
$PQTMCFGRTCM,OK*7A
```

NOTE

To successfully output ephemeris data, first employ **PQTMCFGRTCM** with **<EPH_Mode>** parameter to set the ephemeris output mode, which is designed to output ephemeris by default when updated. Then, apply **PQTMCFGMSGRATE** to specify the corresponding message name and output rate. For details on **PQTMCFGRTCM** and **PQTMCFGMSGRATE**, see [document \[1\] protocol specification](#).

2.2.3. Fixed Mode and Survey-in Mode Configuration

The accuracy of the base station position coordinates is crucial because the positioning accuracy of a rover in RTK mode is influenced by the accuracy of the base station position. If you know the base station position coordinates, you can set the module to Fixed mode and the known coordinates directly to module through **PQTMCFGSVIN**.

If you do not know the accurate coordinates, you can obtain them automatically through the Survey-in mode of the module, which calculates the weighted average of all valid 3D position coordinates. In Survey-in mode, you need to set the 3D positioning accuracy and the number of position coordinates (i.e., the minimum positioning times in Survey-in mode) used to calculate the weighted average of position coordinates. Only coordinates that meet the set 3D position accuracy are considered valid and are included in the weighted average calculation. Once the number of valid position coordinates reaches the set value, the module automatically saves the averaged coordinates and outputs them. If the module is restarted, the saved averaged coordinates will be used for output. To recalculate the coordinates, just

re-execute **PQTMCFGSVIN**. The module also supports RTK function in base station mode, which helps the module to obtain accurate position.

The Survey-in mode can be configured via **PQTMCFGSVIN**, and its status can be viewed by **PQTMSVINSTATUS**. Example for setting or getting Survey-in feature is shown below:

Example:

```
//Set module to Fixed mode and manually configure the module's coordinates based on known base
station coordinates (coordinates are in ECEF format)
$PQTMCFGSVIN,W,2,0,0,-2519265.0514,4849534.9045,3277834.6432*2A
//Command executed successfully
$PQTMCFGSVIN,OK*70

//Set module to Survey-in mode with 3600 positioning times and 1.2 m 3D position accuracy threshold
$PQTMCFGSVIN,W,1,3600,1.2,0,0,0*0A
//Command executed successfully
$PQTMCFGSVIN,OK*70

//Query whether the Survey-in mode of the module is enabled
$PQTMCFGSVIN,R*26
//Survey-in mode of the module is disabled
$PQTMCFGSVIN,OK,0,0,0.0,0.0000,0.0000,0.0000*40
```

NOTE

After configuring the parameters in the "set" commands, send **\$PQTMSAVEPAR*5A** to save the configuration, and then restart the module to ensure that all changes take effect. Otherwise, the module will restore the default values after power-up.

3 Base Station Mode Assembly and Usage

This chapter describes the base station assembly process, the base station configuration via Fixed mode or Survey-in mode and satellite observation data (RTCM) transition between base station and rover.

3.1. Base Station Hardware Assembly

3.1.1. Required Components

The following components are required for assembling the base station:

- Quectel GNSS MODULE EVB V1.3 with USB Type-C cable
- LG290P TE-A V1.1, base station antenna and rover antenna
- EG25-G TE-A, 4G antenna and (U)SIM card
- PC with internet connection



Figure 1: Base Station Antenna



Figure 2: Rover Antenna

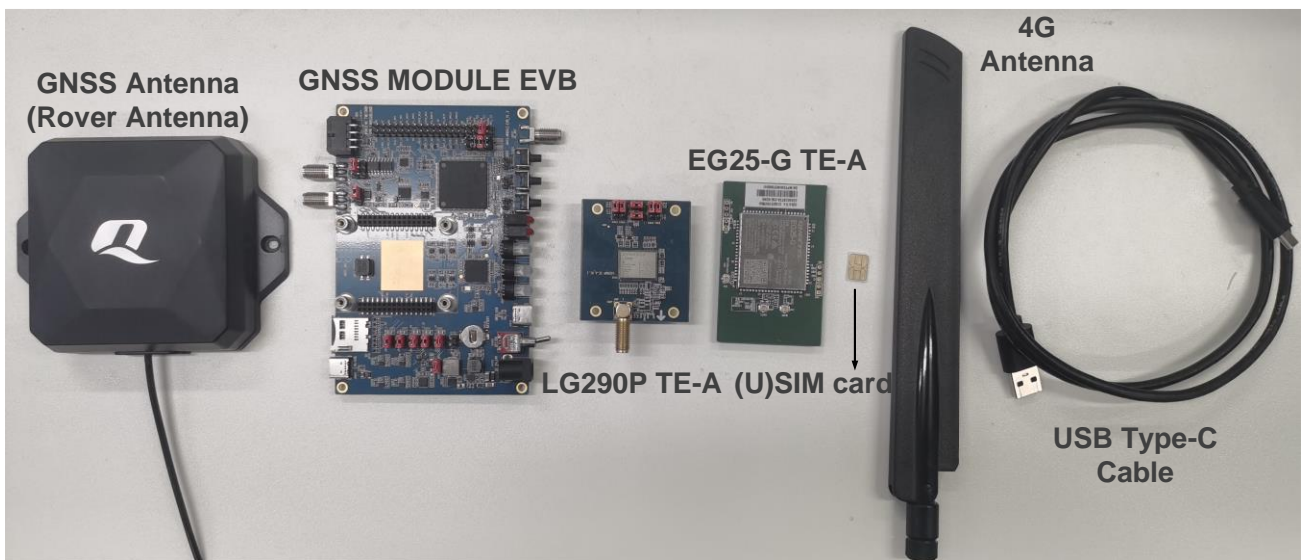


Figure 3: Components for Base Station Assembly

3.1.2. Base Station Assembly

This usage example demonstrates how to assemble a base station using a Quectel GNSS MODULE EVB. For demonstration purposes, rover antennas are used for both the rover and the base station.

The connection schematic of the base station assembly is shown in [Figure 4: Base Station Assembly – Front Side](#) and [Figure 5: Base Station Assembly – Back Side](#). For information on using Quectel GNSS MODULE EVB, see [document \[2\] EVB user guide](#).

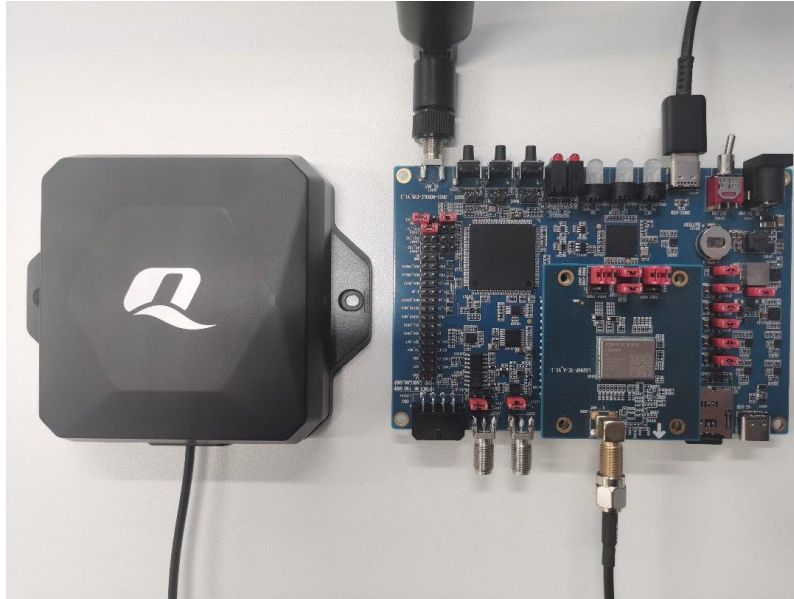


Figure 4: Base Station Assembly – Front Side

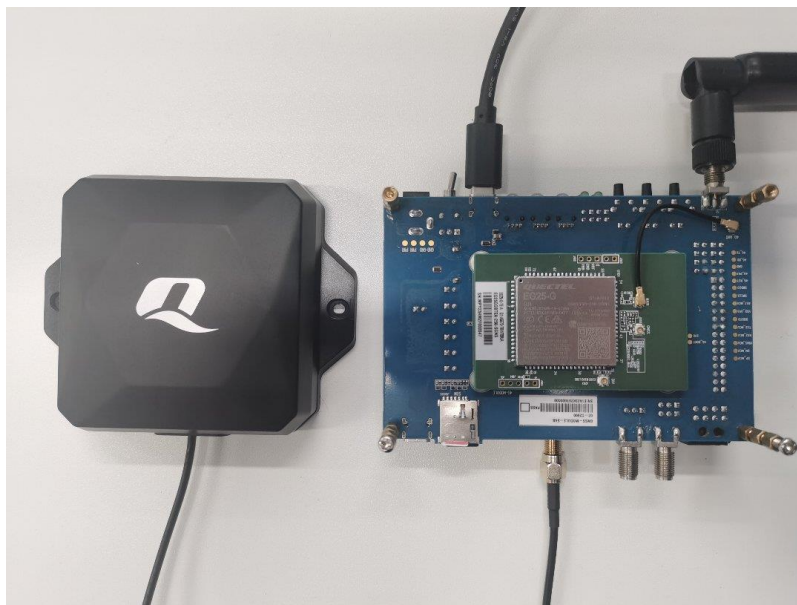


Figure 5: Base Station Assembly – Back Side

Base Station Antenna Installation: For optimal performance, install the base station in an open sky environment. You can mount it on the roof of a building using a measurement type antenna. The signal is transmitted to the base station equipment using a proprietary RF cable.



Figure 6: Base Station Antenna Installation

For rover and base station antennas, you can choose the LG290P (03) companion antenna, as shown in [Figure 1: Base Station Antenna](#) and [Figure 2: Rover Antenna](#), or other antennas that meet the antenna specifications outlined in [document \[3\] hardware design](#). For more information about the antenna, contact Quectel Technical Support (support@quectel.com).

3.2. Base Station Configuration

Before using the LG290P (03) as a base station, you need to set the module to base station mode and then fix the base station position. As mentioned in the previous chapter, there are two methods to determine the base station position. One is to manually configure the known base station location coordinates in the LG290P (03) module via Fixed mode, and the other is to use the Survey-in mode of the LG290P (03) to automatically determine the position. The following chapters describe the configuration process for each method.

3.2.1. Manual Configuration of Base Station Coordinates by Fixed Mode

The following example describe the manual configuration of base station coordinates in detail:

Example:

```
//Configure the module operating mode to base station mode
$PQTMCFGRCVRMODE,W,2*29
//Command executed successfully
$PQTMCFGRCVRMODE,OK*64
//Save configuration
$PQTMSAVEPAR*5A
//Command executed successfully
$PQTMSAVEPAR,OK*72
//Reboot the module via the relevant command (software reboot) or the RESET_N pin (hardware reboot)
and the software reboot is used here
$PQTMSRR*4B
//Wait for the module to power on
//Configure the ECEF coordinates of the base station (X = -2519265.0514, Y = 4849534.9045, Z =
3277834.6432)
$PQTMCFGSVIN,W,2,0,0,-2519265.0514,4849534.9045,3277834.6432*2A
//Command executed successfully
$PQTMCFGSVIN,OK*70
//Configure PQTMSVINSTATUS to output once per positioning times via PQTMCFGMSGRATE to view
the Survey-in status (It is an optional step.)
$PQTMCFGMSGRATE,W,PQTMSVINSTATUS,1,1*58
//Command executed successfully
$PQTMCFGMSGRATE,OK*29
//Save configuration
$PQTMSAVEPAR*5A
//Command executed successfully
$PQTMSAVEPAR,OK*72
//Reboot the module via the relevant command (software reboot) or the RESET_N pin (hardware reboot)
and the software reboot is used here
$PQTMSRR*4B
//Output the configured value of base station ECEF coordinates via RTCM3-1005 (The module outputs
this message by default in base station mode.)
D3 00 13 3E D1 22 03 3A 22 66 A8 EE 8B 4A 8C 4D 35 07 A1 BD DF BF BB 0A 12
//View the base station ECEF coordinate configuration values via PQTMSVINSTATUS (It is an optional
```

```

step and it is also recommended to disable the message output after verifying the status.)
$PQTMSTATUS,1,288282000,2,,00,0,0,-2519265.0514,4849534.9045,3277834.6432,0.0000*3E
$PQTMSTATUS,1,288283000,2,,00,0,0,-2519265.0514,4849534.9045,3277834.6432,0.0000*3F
$PQTMSTATUS,1,289072000,2,,00,0,0,-2519265.0514,4849534.9045,3277834.6432,0.0000*32
//Disable PQTMSTATUS output via PQTMCFGMSGRATE
$PQTMCFGMSGRATE,W,PQTMSTATUS,0,1*59
//Command executed successfully
$PQTMCFGMSGRATE,OK*29
//Save configuration
$PQTMSAVEPAR*5A
//Command executed successfully
$PQTMSAVEPAR,OK*72
//Reboot the module via the relevant command (software reboot) or the RESET_N pin (hardware reboot)
and the software reboot is used here.
$PQTMRR*4B
    
```

3.2.2. Automatic Convergence of Coordinates by Survey-in Mode

The following examples describe the automatic convergence of coordinates by Survey-in mode in detail:

Example:

```

//Configure the module operating mode to base station mode
$PQTMCFGRCVRMODE,W,2*29
//Command executed successfully
$PQTMCFGRCVRMODE,OK*64
//Save configuration
$PQTMSAVEPAR*5A
//Command executed successfully
$PQTMSAVEPAR,OK*72
//Reboot the module via the relevant command (software reboot) or the RESET_N pin (hardware reboot)
and the software reboot is used here
$PQTMRR*4B
//Wait for the module to power on
//Configure the base station to Survey-in mode with 60 positioning times and 15.0 m 3D position accuracy
threshold
$PQTMCFGSVIN,W,1,60,15.0,0,0,0*3E
//Command executed successfully
$PQTMCFGSVIN,OK*70
    
```

```

//Configure PQTMSVINSTATUS to output once per positioning times via PQTMCFGMSGRATE to view
the Survey-in status (It is an optional step.)
$PQTMCFGMSGRATE,W,PQTMSVINSTATUS,1,1*58
//Command executed successfully
$PQTMCFGMSGRATE,OK*29
//Save configuration
$PQTMSAVEPAR*5A
//Command executed successfully
$PQTMSAVEPAR,OK*72
//Reboot the module via the relevant command (software reboot) or the RESET_N pin (hardware reboot)
and the software reboot is used here.
$PQTMSRR*4B
//Output the mean ECEF coordinates of the base station during convergence via RTCM3-1005 (The
module outputs this message by default in base station mode.)
D3 00 13 3E D1 22 03 3B 54 97 DA 6F 8C 99 B2 AF 40 06 4C FC 1A 4B 1E 7D F1
//View the mean ECEF coordinates of the base station from the beginning to the completion of
convergence via PQTMSVINSTATUS (It is an optional step and it is also recommended to disable the
message output after the completion of convergence.)
$PQTMSVINSTATUS,1,291264000,1,,11,1,60,-2005560.2218,5411825.5447,2706139.7061,1.8691*0C
$PQTMSVINSTATUS,1,291265000,1,,11,2,60,-2005560.1264,5411824.9421,2706139.6738,4.9992*09
$PQTMSVINSTATUS,1,291266000,1,,11,3,60,-2005560.1137,5411824.5510,2706139.6722,4.3119*0B
$PQTMSVINSTATUS,1,291267000,1,,11,4,60,-2005560.2000,5411824.9447,2706140.0627,1.3000*04
... ..
$PQTMSVINSTATUS,1,291320000,1,,11,57,60,-2005559.8625,5411823.2315,2706139.4103,1.7206*36
$PQTMSVINSTATUS,1,291321000,1,,11,58,60,-2005559.8577,5411823.2160,2706139.4067,1.6716*3A
$PQTMSVINSTATUS,1,291322000,1,,11,59,60,-2005559.8530,5411823.2016,2706139.4032,1.7830*31
$PQTMSVINSTATUS,1,291323000,2,,11,60,60,-2005559.8481,5411823.1873,2706139.3995,1.8075*3F
$PQTMSVINSTATUS,1,291324000,2,,11,60,60,-2005559.8481,5411823.1873,2706139.3995,1.8075*38
$PQTMSVINSTATUS,1,291325000,2,,11,60,60,-2005559.8481,5411823.1873,2706139.3995,1.8075*39
//Convergence completed and disable PQTMSVINSTATUS output via PQTMCFGMSGRATE
$PQTMCFGMSGRATE,W,PQTMSVINSTATUS,0,1*59
//Command executed successfully
$PQTMCFGMSGRATE,OK*29
//Save configuration
$PQTMSAVEPAR*5A
//Command executed successfully
$PQTMSAVEPAR,OK*72
//Reboot the module via the relevant command (software reboot) or the RESET_N pin (hardware reboot)
    
```

and the software reboot is used here.

\$PQTMSRR*4B

NOTE

1. If the base station position changes after the base station coordinates converge, the output coordinates no longer match the actual base station position, and you need to configure the coordinates through **PQTMCFGSVIN**. Refer to [Chapter 3.2.2 Automatic Convergence of Coordinates by Survey-in Mode](#) to reconfigure the Survey-in mode, then save the changes and restart the module. If the Survey-in configuration is still the same as the previous configuration then there is no need to save it again, simply execute **PQTMCFGSVIN** and then restart the module.
2. If the Survey-in status message (**PQTMSVINSTATUS**) of the base station is transmitted to the rover, the rover will report an error indicating that the command is not supported. For details about the error, see [document \[1\] protocol specification](#).

3.3. Data Transmission

For the rover to receive satellite observation data from the base station, it is necessary to transmit the data from the base station to the rover. Generally, there are two transmission methods: wired connection and wireless connection. The wired connection is limited by the wire harness and it is rarely used. In practical applications, data is mostly transmitted wirelessly. Many wireless transmission options are available, cellular networks, Wi-Fi, radios, LoRa, etc.

3.3.1. Network Transmission

This chapter employs LG290P (03) and GNSS MODULE EVB as an example to explain the wireless transmission of base station’s satellite observation data via PC-based or cellular-based network, with the assistance of QGNSS NTRIP. The QGNSS supports NTRIP Caster, NTRIP Server and NTRIP Client functions.

3.3.1.1. PC-based Network

As shown in figure below, the satellite observation data from the base station is transmitted to the NTRIP Caster via the NTRIP Server, and the rover obtains the satellite observation data uploaded by the base station from the NTRIP Caster via the NTRIP Client.

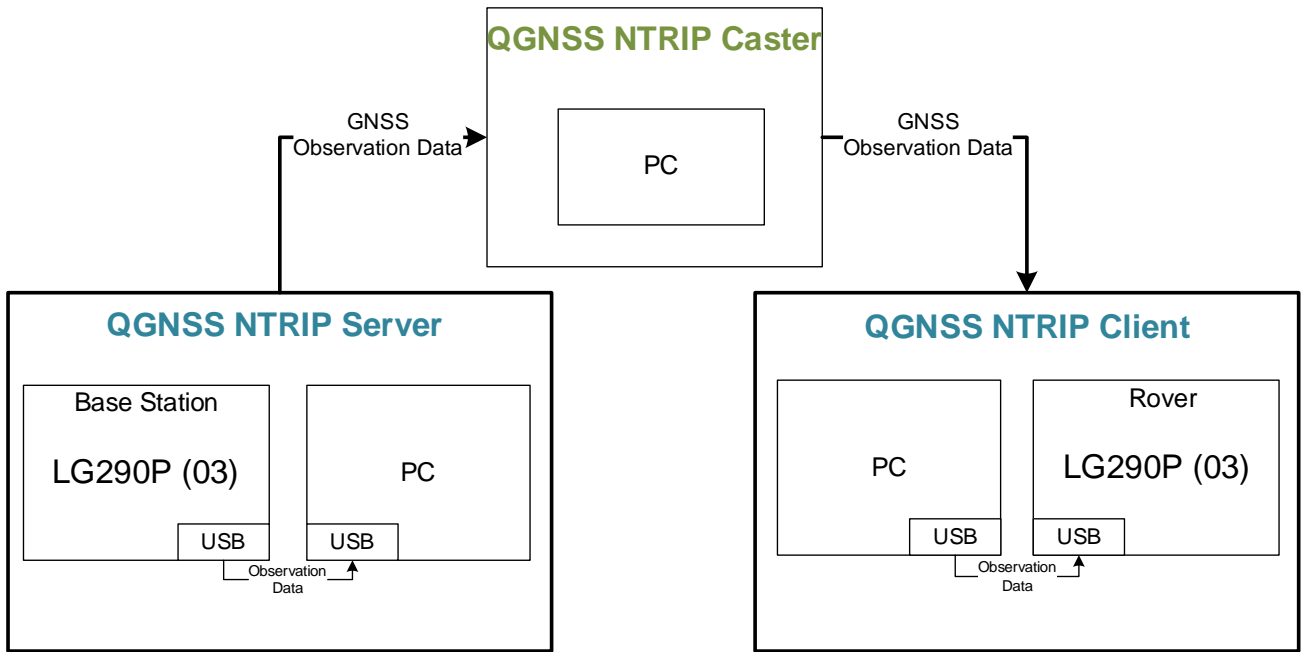


Figure 7: Schematic Diagram of PC-based Network Connection

Step 1 PC-based network connection diagram is shown in figure below. To set up the base station and rover, see [Figure 4: Base Station Assembly – Front Side](#) and [Figure 5: Base Station Assembly – Back Side](#). For convenient RTK verification, the NTRIP Server and NTRIP Caster can be set up with the same PC and the same QGNSS. For more information on the use of QGNSS, see [document \[4\] QGNSS user guide](#).

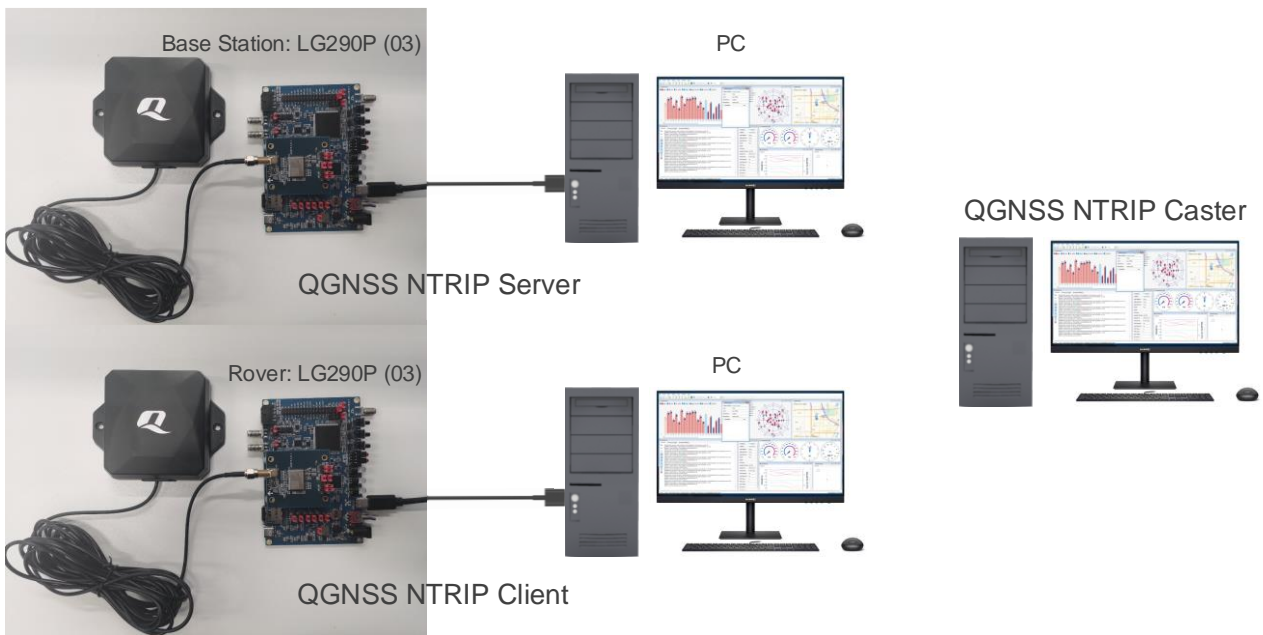



Figure 8: PC-based Network Connection

Step 2 Click  to open the NTRIP Caster and enter the IP address, port, user and password. Check the checkbox next to **“Start/Stop”** to start NTRIP Caster.

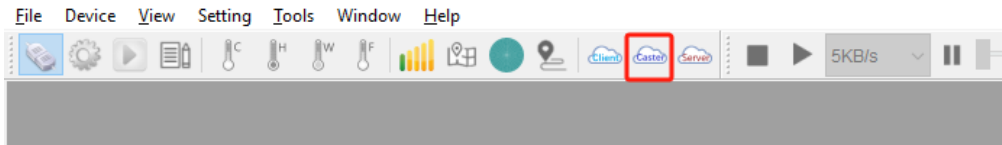


Figure 9: Opening NTRIP Caster

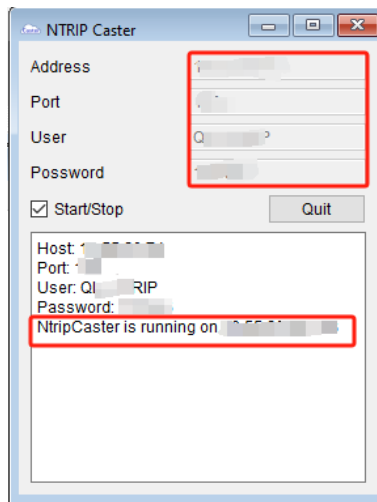



Figure 10: Configuring NTRIP Caster

NOTE

If NTRIP Server, NTRIP Caster and NTRIP Client are not in the same local area network, you need to use a public IP address. If you use a cellular network, you must use a public IP address.

Step 3 Click  to open the NTRIP Server and enter the IP address, port, user and password of the NTRIP Caster to be connected and the mount point. Check the checkbox next to **“Start/Stop”** to start NTRIP Server. If the NTRIP Server successfully connects to the NTRIP Caster, you can see the connection information in the NTRIP Caster, as shown in [Figure 13: Successful Connection of NTRIP Server to NTRIP Caster](#).

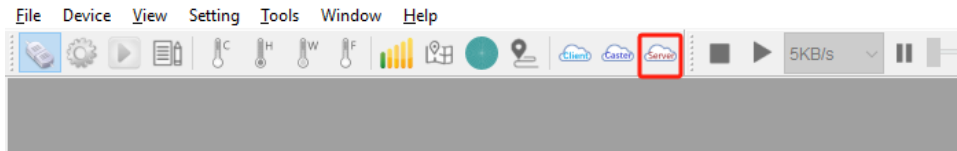


Figure 11: Opening NTRIP Server

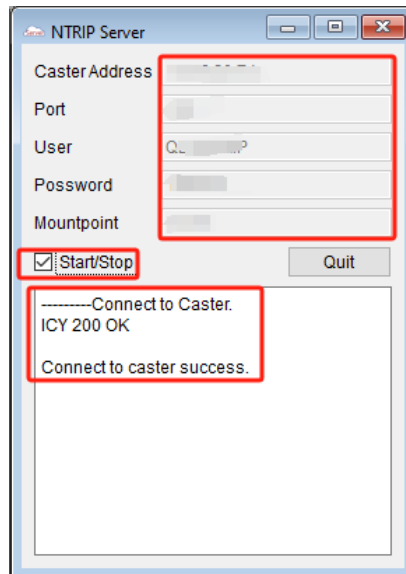


Figure 12: Configuring NTRIP Server

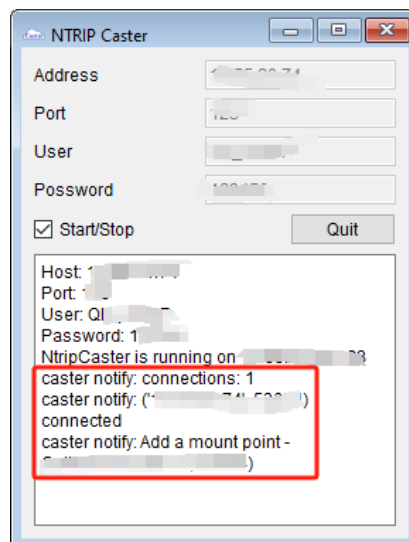



Figure 13: Successful Connection of NTRIP Server to NTRIP Caster

Step 4 Click  to open the NTRIP Client and enter the IP address, port, username and password of the NTRIP Caster to be connected and the mount point. Turn on the **“Connect To Host”** switch to start NTRIP Client. If the NTRIP Client successfully connects to the NTRIP Caster, you can see the connection information in the NTRIP Caster, as shown in [Figure 16: Successful Connection of NTRIP Client to NTRIP Caster](#).

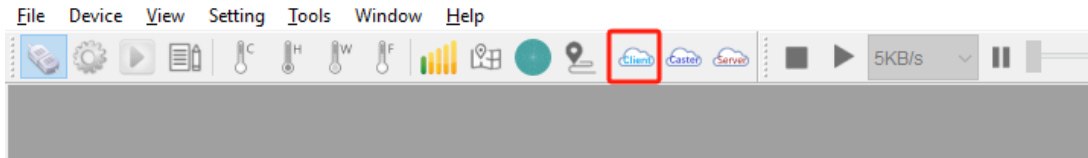


Figure 14: Opening NTRIP Client

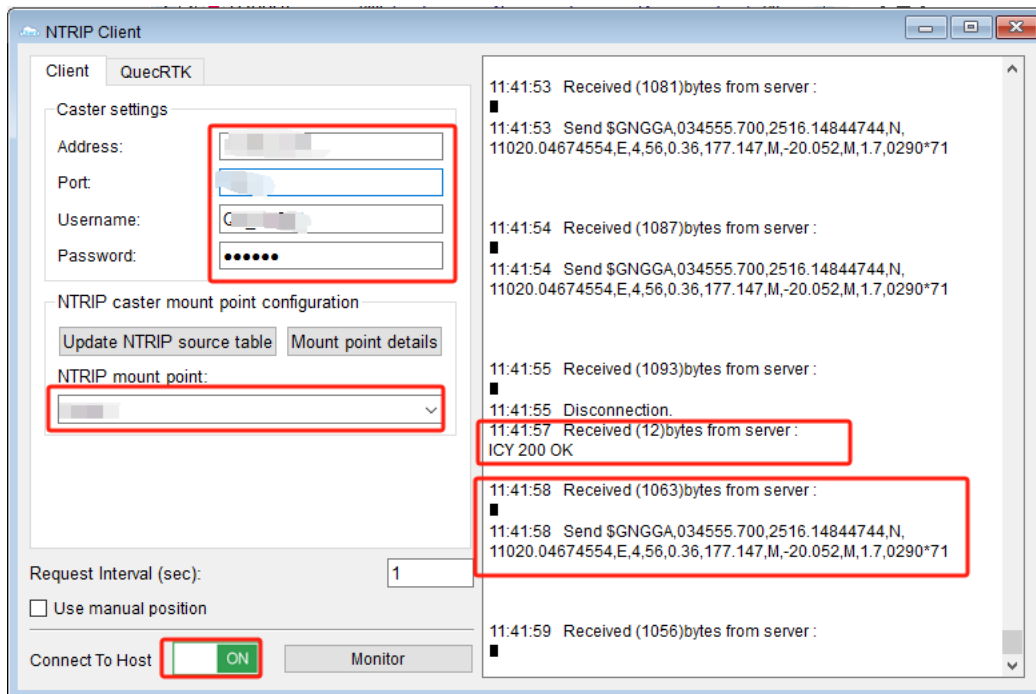


Figure 15: Logging in to NTRIP Client (Obtaining Satellite Observation Data)

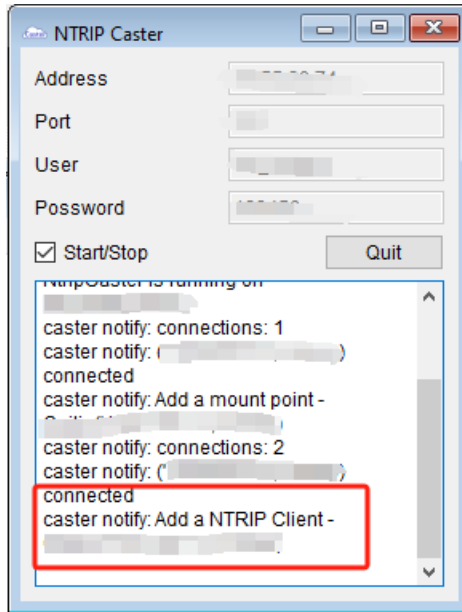


Figure 16: Successful Connection of NTRIP Client to NTRIP Caster

Step 5 As shown in figure below, click to display the search box and enter the “GGA”. Then, click the button under the search box to display the matched **GGA** messages in the right box. The **<Quality>** parameter value in **GGA** indicates that the LG290P (03) as the rover has transitioned from a single-point solution to an RTK floating-point solution, and then to an RTK fixed solution. For more information about **GGA** and QGNSS operation, see [documents \[1\] protocol specification](#) and [\[4\] QGNSS user guide](#).

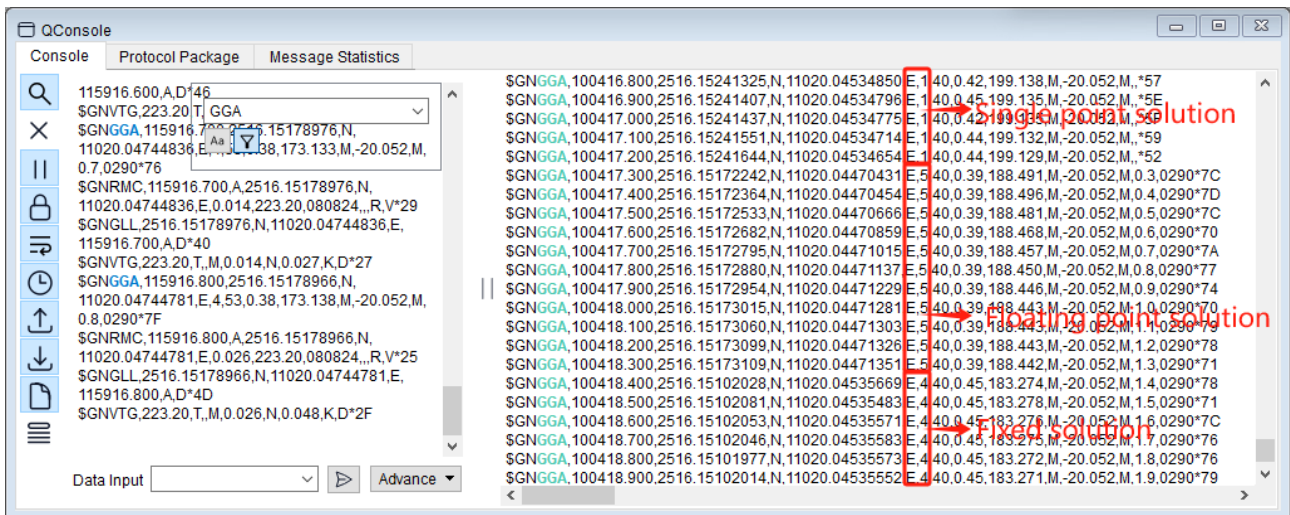


Figure 17: Successful Enabling of Fixed Solution on Rover

3.3.1.2. Cellular-based Network

As shown in figure below, the satellite observation data from the base station is uploaded to the NTRIP Caster using data transmission capabilities of the cellular module. The rover obtains the satellite observation data uploaded by the base station from the NTRIP Caster also through the cellular module's data transmission capabilities.

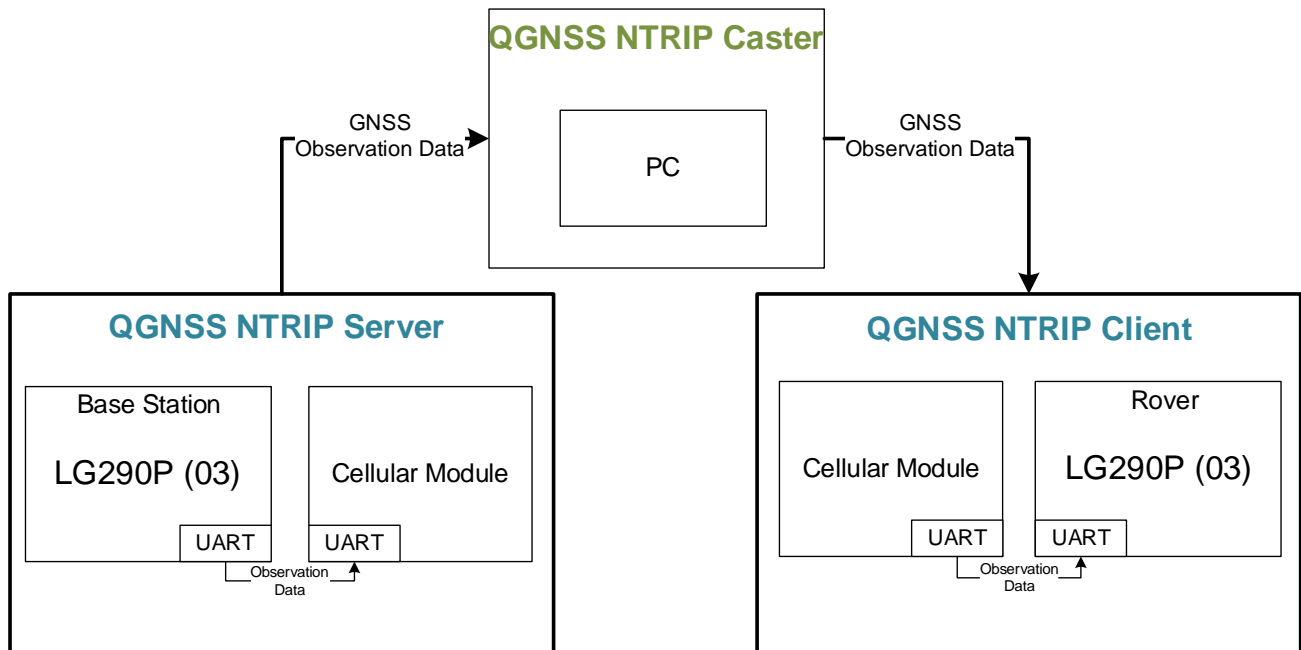


Figure 18: Schematic Diagram of Cellular-based Network Connection

Step 1 Cellular-based network connection schematic is shown in figure below. To set up the base station and rover, see [Figure 4: Base Station Assembly – Front Side](#) and [Figure 5: Base Station Assembly – Back Side](#). For more information on the use of the Quectel GNSS MODULE EVB, see [document \[2\] EVB user guide](#).

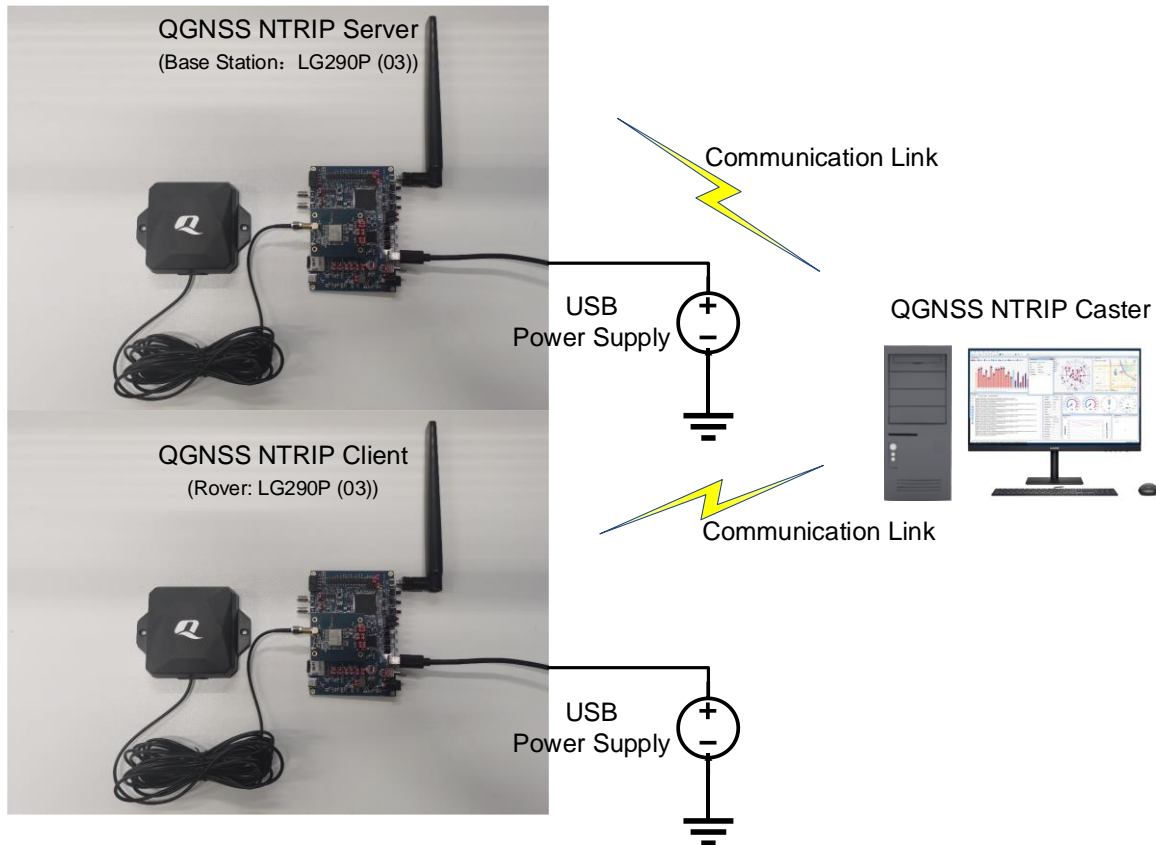


Figure 19: Cellular-Based Network Connection

Step 2 Access the EVB console of the base station and enter the command to connect to the NTRIP Caster using the NTRIP Caster IP address (host), port, username (user), password (pwd) and the NTRIP Server mount point (mnt), and then configure the MCU of the GNSS MODULE EVB to the base station mode. After a while, you can see that you have successfully connected to the NTRIP Caster and the NTRIP server is transferring the satellite observation data to the NTRIP Caster, as shown in [Figure 21: Configuring NTRIP Server via EVB Console](#). If the NTRIP Server successfully connects to the NTRIP Caster, you can also see the connection information in the NTRIP Caster, as shown in [Figure 22: Successful Connection of NTRIP Server to NTRIP Caster](#). The address, port, user and password of the NTRIP Caster should be configured before the NTRIP Server configuration. For the configuration of the NTRIP Caster, see the **Step 2** of [Chapter 3.3.1.1 PC-based Network](#). For access to the GNSS MODULE EVB Console at the base station, see [document \[2\] EVB user guide](#).

```

    QUECTEL

I/application [1769] ** GNSS_MODULE_EVB_MCU_A_V1.0 **
I/param      [1980] Boot for the 389 time.
I/cellular    [2022] -----STARTING Cellular_Task-----

msh >I/autobaud [2231] Autobaud success. 460800
    
```

Figure 20: Accessing EVB Console

```

msh >ntripserver --help
--host <host>
--port <port>
--user <username>
--pwd <password>
--mnt <mount point>
--rstpar          Reset all parameters.
--help
    
```

```

msh >ntripserver --host 220.180.239.212 --port 7990 --user QL_NTRIP --pwd 123456 --mnt HTEST
host      220.180.239.212      ok
port      7990                ok
user      QL_NTRIP          ok
pwd       123456             ok
mnt       HTEST              ok
    
```

```

msh >ntrip --mode base
mode      base                ok
I/CELL_HANDLE [2024/05/24 09:05:47] last_work_mode = 0,current_workmode = 1
I/Ncli      [2024/05/24 09:05:47] No ntrip client service is running
I/NtripSvr  [2024/05/24 09:05:47] attempt to connect to 220.180.239.212:7990.

msh >I/NtripSvr [2024/05/24 09:05:47] len[59],login_buff:
SOURCE 123456 /HTEST
Source-Agent: QNTRIP Quectel-GNSS

I/NtripSvr [2024/05/24 09:05:48] rsp:
ICY 200 OK

I/NtripSvr [2024/05/24 09:05:48] login success
I/NtripSvr [2024/05/24 09:05:48] Transferring rtc...
    
```

Figure 21: Configuring NTRIP Server via EVB Console

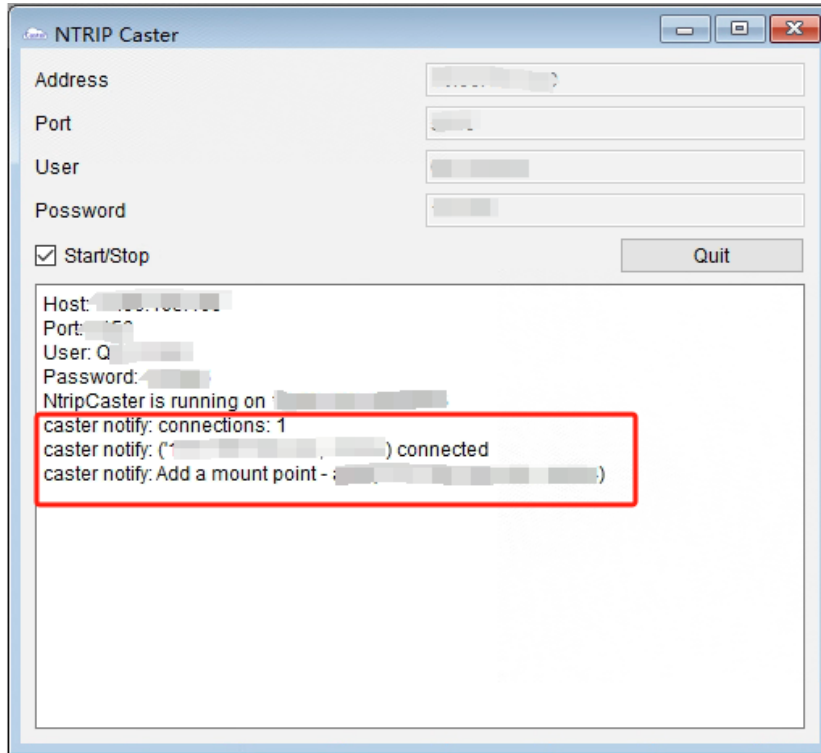


Figure 22: Successful Connection of NTRIP Server to NTRIP Caster

Step 3 Access the EVB console of the rover and enter the command to connect to the NTRIP Caster using the NTRIP Caster IP address (host), port, username (user), password (pwd) and the NTRIP Server mount point (mnt), and then configure the MCU of the GNSS MODULE EVB to rover mode. After a while, you can see that you have successfully connected to the NTRIP Caster and the NTRIP Client is receiving the satellite observation data from the NTRIP Caster as shown in [Figure 23: Configuring NTRIP Client via EVB Console](#). If the NTRIP Client successfully connects to the NTRIP Caster, you can also see the connection information in the NTRIP Caster, as shown in [Figure 24: Successful Connection of NTRIP Client to NTRIP Caster](#).

```
msh >ntripclient --help
--type <QuecRTK/SelfBuild>
--host <host>
--port <port>
--user <username>
--pwd <password>
--mnt <mount point>
--rstpar          Reset all parameters.
--help

msh >ntripclient --host 220.129.212 --port 7990 --user QL_ --pwd 12 --mnt QGNSS
host      220.129.212          ok
port      7990                ok
user      QL_                 ok
pwd       12                  ok
mnt       QGNSS               ok

msh >ntrip --mode rover
mode      rover              ok
I/CELL_HANDLE [2024/05/24 11:36:24] last_work_mode = 0,current_workmode = 2
I/CELL_HANDLE [2024/05/24 11:36:24] no ntrip server service is in progress
I/Ncli [2024/05/24 11:36:24] CorsType[2]
I/Ncli [2024/05/24 11:36:24] CorsType[2],Ntrip_Step[-1]
I/Ncli [2024/05/24 11:36:24] ----- NtripCLI WaitBits[0x1] -----
I/Ncli [2024/05/24 11:36:24] CorsType[2],connect to [220.129.212:7990]

msh >I/Ncli [2024/05/24 11:36:25] rsp:
ICY 200 OK

I/Ncli [2024/05/24 11:36:25] NtripClient login OK
I/Ncli [2024/05/24 11:36:25] Receiving rtcn & sending GGA...
```

Figure 23: Configuring NTRIP Client via EVB Console

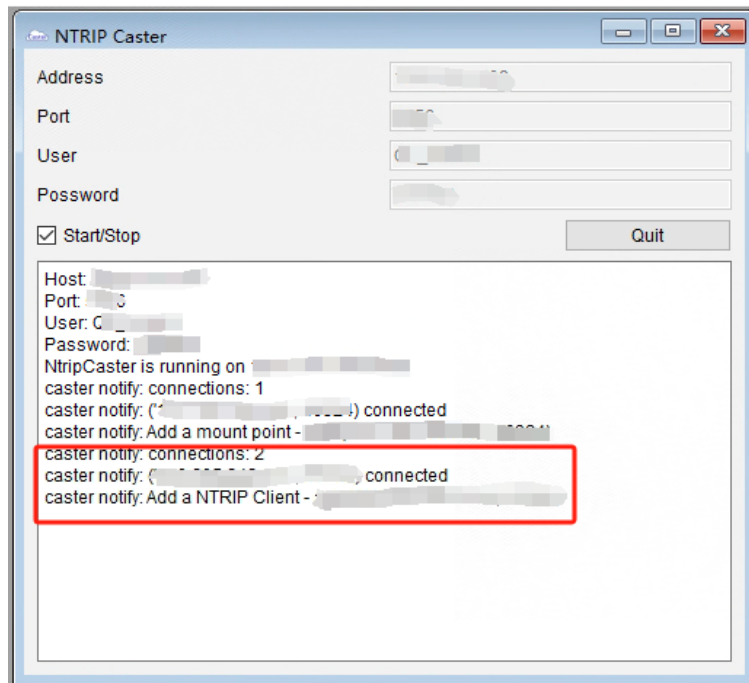


Figure 24: Successful Connection of NTRIP Client to NTRIP Caster

NOTE

When using the rover with the cellular network as the NTRIP Client, insert the MCU_TXD1 (J0404) jumper cap of the GNSS MODULE EVB as shown in figure below.

4 FAQs

1. **Why hasn't the module achieved RTK fixed solution after receiving satellite observation data from the base station for a while?**
 - The issue may be due to the poor GNSS signal received by the base station, resulting in low-quality satellite observation data, or the poor GNSS signal received by the rover leads to a poor RTK calculation result preventing the module from achieving RTK fixed solution.

2. **Why does the convergence count of the base station (<Obs> parameter value) remain unchanged or zero when viewing the Survey-in status with PQTMSVINSTATUS after the module enters the Survey-in mode as a base station?**
 - The convergence count increments only when the current base station coordinates meet the set 3D position accuracy threshold. This situation could arise if the 3D position accuracy threshold is set too low or if the current coordinate accuracy is insufficient to meet the 3D position accuracy threshold.

3. **After the module enters the base station mode, can the RTK fixed solution be enabled?**
 - It is possible. After the module enters the base station mode, the RTK calculation continues to operate normally. Therefore, the RTK fixed solution can be enabled by injecting satellite observation data (RTCM) while the module is in the base station mode, and the **RTCM3-1005/1006** formatted coordinate data output after the base station convergence will be more accurate.

4. **What could be the cause for the loss of satellite observation data received by the rover?**
 - Insufficient transmission bandwidth of the base station could be the cause. This can be addressed by reducing the message output frequency with **PQTMCFGMSGRATE**. If you are using the UART for direct output of satellite observation data, it is possible that the baud rate used for transmission is inadequate; consider switching to a higher baud rate.

5 Appendix References

Table 2: Related Documents

Document Name
[1] Quectel_LG290P(03)_GNSS_Protocol_Specification
[2] Quectel_GNSS_Module_EVB_User_Guide
[3] Quectel_LG290P(03)_Hardware_Design
[4] Quectel_QGNSS_User_Guide

Table 3: Terms and Abbreviations

Abbreviation	Description
3D	Three-Dimensional
ACK	Acknowledgment
BDS	BeiDou Navigation Satellite System
ECEF	Earth-Centered, Earth-Fixed
Galileo	Galileo Satellite Navigation System (EU)
GGA	Global Positioning System Fix Data
GLL	Geographic Position – Latitude/Longitude
GLONASS	Global Navigation Satellite System
EVB	Evaluation Board
GNSS	Global Navigation Satellite System
GPS	Global Positioning System
GSA	GPS DOP and Active Satellites
GSV	GPS Satellites in View

Abbreviation	Description
LoRa	Long Range Radio
MCU	Microcontroller Unit/Microprogrammed Control Unit
NavIC	Indian Regional Navigation Satellite System
NMEA	National Marine Electronics Association
NTRIP	Networked Transport of RTCM via Internet Protocol
PC	Personal Computer
RF	Radio Frequency
RMC	Recommended Minimum Specific GNSS Data
RTCM	Radio Technical Commission for Maritime Services
RTK	Real-Time Kinematic
SBAS	Satellite-Based Augmentation System
TE-A	Terminal Equipment Adapter
TXD	Transmit Data (Pin)
UART	Universal Asynchronous Receiver/Transmitter
USB	Universal Serial Bus
(U)SIM	(Universal) Subscriber Identity Module
VRS	Virtual Reference Station
QZSS	Quasi-Zenith Satellite System